

# Montage- und Serviceanleitung

für die Fachkraft

**VIESSMANN**

**Vitodens 100**

**Typ WB1A**

Gas fired wall mounted condensing boiler

Natural gas version

*Gültigkeitshinweise siehe letzte Seite*



## VITODENS 100



## Safety instructions



Bitte befolgen Sie diese Sicherheitshinweise genau, um Gefahren und Schäden für Menschen und Sachwerte auszuschließen.

### Erläuterung der Sicherheitshinweise



#### **Gefahr**

Dieses Zeichen warnt vor Personenschäden.



#### **Achtung**

Dieses Zeichen warnt vor Sach- und Umweltschäden.

### **Hinweis**

Angaben mit dem Wort *Hinweis* enthalten Zusatzinformationen.

### **Target group**

These instructions are exclusively designed for qualified personnel.

- Work on gas equipment must only be carried out by a CORGI registered gas fitter.
- Electrical work must be compliant with Part P of the building regulations
- The system must be commissioned by the system installer or a qualified person authorised by the installer.

### **If you notice the smell of gas**



#### **Gefahr**

Escaping gas can cause explosions which may lead to serious injury.

- Do not smoke. Prevent naked flames and sparks. Never operate light switches or those of electrical equipment.
- Open windows and doors.
- Close the gas shut-off valve.
- Remove all personnel from the danger zone.
- Observe the safety regulations of your local gas supplier, found on the gas meter.
- Notify your heating contractor from outside the building.

### **If you smell flue gas**



#### **Gefahr**

Flue gas may lead to life-threatening poisoning.

- Heating system shutdown
- Ventilate the boiler room.
- Close all doors leading to the living space.
- Do not operate electrical switches.

## **Safety instructions** (Fortsetzung)

### **Working on the heating system**

- Isolate the system from the mains electric power supply, e.g. by removing a separate fuse or by means of a mains electrical isolator, and check that it is no longer 'live'.
- Isolate the gas supply and safeguard against unauthorised reopening.

### **Repair work**



#### **Achtung**

Repairing components which fulfil a safety function can compromise the safe operation of your heating system. Replace faulty components only with original Viessmann spare parts.

### **Ancillary components, spare and wearing parts**



#### **Achtung**

Spare and wearing parts which have not been tested together with the heating system can compromise its function. Installing non-authorised components and non-approved modifications/conversion can compromise safety and may infringe our warranty conditions.

For replacements, use only original spare parts from Viessmann or those which are approved by Viessmann.

## Inhaltsverzeichnis

### Montageanleitung

#### Montagevorbereitung

Produktinformation .....	5
Montagevorbereitung .....	5

#### Montageablauf

Installing the boiler and making all connections .....	32
Flue outlet .....	39
Electrical connections .....	41
Commissioning and testing .....	46

### Serviceanleitung

Erstinbetriebnahme, Inspektion, Wartung .....	55
---	----

#### Service Instructions

Routine Servicing Instructions .....	55
--------------------------------------	----

#### Störungsbehebung

Fault finding .....	66
Repairs .....	70

#### Schemen

Connection and wiring diagrams – combi boiler .....	78
Connection and wiring diagram - system boiler .....	80

Einzelteillisten .....	82
------------------------	----

Protokolle .....	88
------------------	----

#### Bescheinigungen

Konformitätserklärung .....	92
-----------------------------	----

Stichwortverzeichnis .....	93
----------------------------	----

## Produktinformation

### Vitodens100, WB1A

Set up for operation with natural gas.

## Montagevorbereitung

### General Information

#### Appliance description

The Vitodens 100 is a fully automatic, wall hung, fan assisted balanced flue condensing boiler for use with Natural Gas (G20).

The Vitodens 100 is fully modulating and provides central heating outputs between 8.0 kW (27,300Btu/h) and 24.0 kW (84,300Btu/h)/30.0 kW (93,550 Btu/h) and instantaneous hot water at outputs between 8.0 kW (27,300 Btu/h) and 24.0 kW (84,300Btu/h)/30.0 kW (93,550 Btu/h).

The appliance always gives priority to domestic hot water supply.

The appliance is designed for use with sealed primary water systems (only) and incorporates a circulation pump, diverter valve assembly, flow switch (combi boiler only), DHW plate heat exchanger (combi boiler only), safety valve and CH expansion vessel. A separate DHW expansion vessel is not required.

Internal frost protection and an electronic control unit is fitted as standard equipment and the boiler may be used with any suitable room thermostat and / or time clock in addition to the optional controls available from Viessmann.

Asbestos, mercury or CFC's have not and will not be used in this product.

#### Certification details

The Vitodens 100 is certified to comply with the requirements of prEN 483 and EN 625 for use in GB and IE (Great Britain and Ireland) using gas category 2H (G20 with a governed gas supply at 20 mbar (8 in.wg) inlet pressure).

The appliance classification is either C13x or C33x depending upon whether a horizontal or vertical flue terminal is used.


**Montagevorbereitung** (Fortsetzung)**Technical Specification****General Specifications and Performance Data**

<b>Rated output range</b>			
<b>T<sub>v</sub>/T<sub>r</sub> 50/30 °C</b>	<b>kW</b>	<b>8 to 24</b>	<b>8 to 30</b>
<b>T<sub>v</sub>/T<sub>r</sub> 80/60 °C</b>	<b>kW</b>	<b>7.3 to 21.8</b>	<b>7.3 to 27.3</b>
Rated output range	kW	7.4 to 22.3	7.4 to 28.0
Maximum gas rate	m <sup>3</sup> /h	2.36	2.96
Combi boiler:			
Design domestic hot water performance (specific rate)	l/min	9.0	12.0
Domestic hot water temperature range	°C	30 - 60	30 - 60
Maximum mains water inlet pressure	bar	10	10
Minimum mains water inlet pressure for operation	bar	1	1
Total water capacity (Including expansion Vessel)	l	3.5	3.5
Minimum CH system pressure (static head) – Cold	bar	1.0	1.0
Maximum CH system pressure (static head) – Hot	bar	3.0	3.0
Maximum CH flow temperature	°C	80	80
Integral expansion vessel capacity	l	8	8
Integral expansion vessel pre-charge pressure	bar	0.75	0.75
Lift weight			
- Combi boiler	kg	43	43
- System boiler	kg	42	42
Total weight inc. packaging			
- Combi boiler	kg	48	48
- System boiler	kg	47	47
Electrical supply		230 V, 50Hz	230 V, 50Hz
Internal fuse	A	4	4
Maximum power consumption	W	145	145
Flue outlet (clearance Ø):	mm	60	60
Ventilation pipe (outside Ø)	mm	100	100
Gas Council Number			
- Combi boiler		47-819-04	47-819-05
- System boiler		41-819-09	—
Product ID		CE-0085 BQ 0017	

## Montagevorbereitung (Fortsetzung)

### Overall Appliance Dimensions

#### Combi boiler

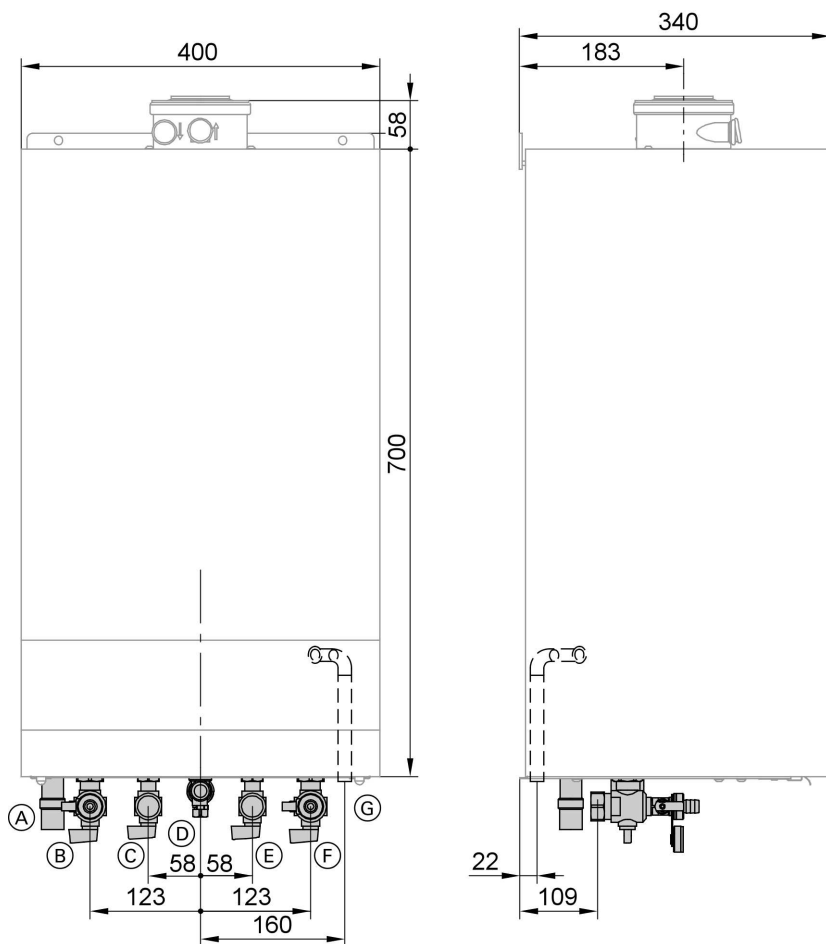

- (A) Condensate drain: Plastic pipe  $\varnothing 22$  mm
- (B) Heating flow:  $\varnothing 22$  mm
- (C) DHW:  $\varnothing 15$  mm


- (D) Gas connection: Rp  $\frac{1}{2}$
- (E) Cold water:  $\varnothing 15$  mm
- (F) Heating return:  $\varnothing 22$  mm
- (G) Safety valve drain:  $\varnothing 15$  mm

5851 670

Montage

## Montagevorbereitung (Fortsetzung)

### System boiler

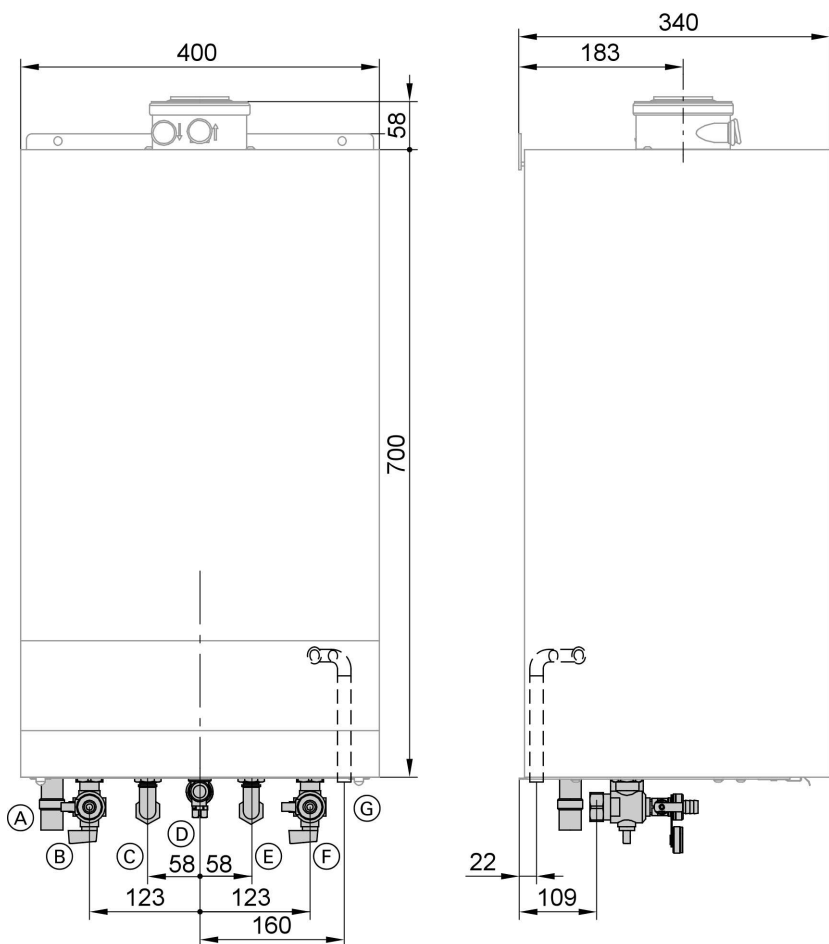


- (A) Condensate drain: Plastic pipe  
Ø22 mm
- (B) Heating flow: Ø22 mm
- (C) DHW cylinder flow: Ø22 mm

- (D) Gas connection: Rp ½
- (E) DHW return: Ø22 mm
- (F) Heating return: Ø22 mm
- (G) Safety valve drain: Ø15 mm

## Montagevorbereitung (Fortsetzung)

### Minimum installation clearances

The following minimum clearances (mm) must be maintained for installing and servicing the appliance.

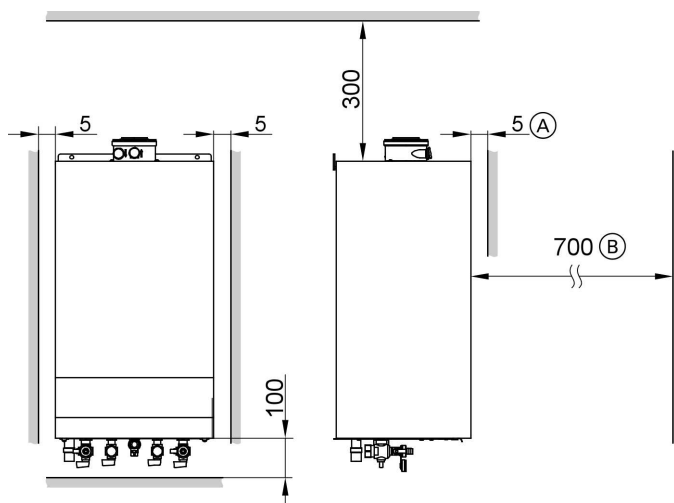

(A) Front (behind removable panel)

(B) Front (for service)

### Flue System Specifications


#### Concentric Horizontal Flue System

Standard horizontal flue kit: The appliance can be supplied complete with a standard concentric horizontal flue terminal assembly, suitable for flue lengths of up to 620 mm from the centre of the flue outlet, which equates to wall thicknesses of up to 480 mm for rear flues and 463 mm for side flues, including minimum clearances.

Extension ducts can be used to increase the straight flue length up to 6 m and include one 87° elbow.

## Montagevorbereitung (Fortsetzung)

An extra 87° elbow can be used but this reduces the maximum permissible length by 1 m . An extra 45° elbow can be used but this reduces the maximum permissible length by 0.5 m .

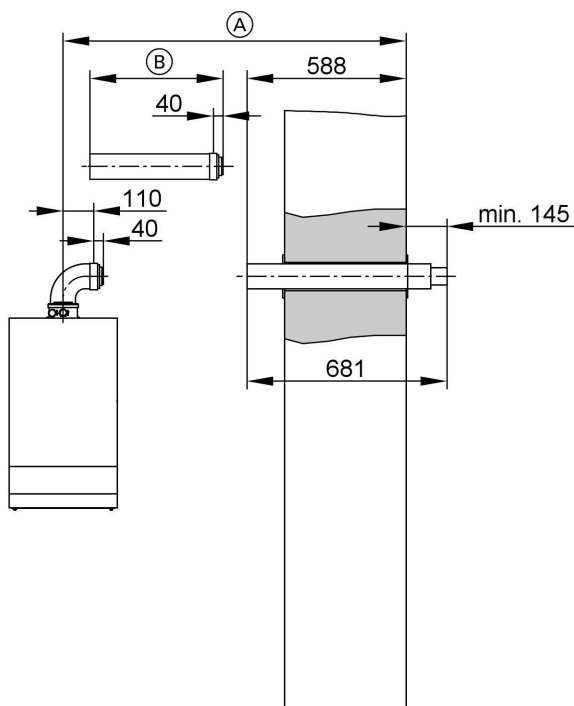

Ⓐ Combined length of flue outlet/ventilation pipe max 6m.

Ⓑ Flue outlet/ventilation pipe (can be shortened as necessary)


### Concentric Vertical Flue System

The vertical flue kit (optional extra) with extensions may be used for up to 10 m applications.

## Montagevorbereitung (Fortsetzung)

An extra 87° elbow can be used but this reduces the maximum permissible length by 1 m. An extra 45° elbow can be used but this reduces the maximum permissible length by 0.5 m.

Before commencing the installation refer to diagram below to determine which optional extension kits are required, if any.

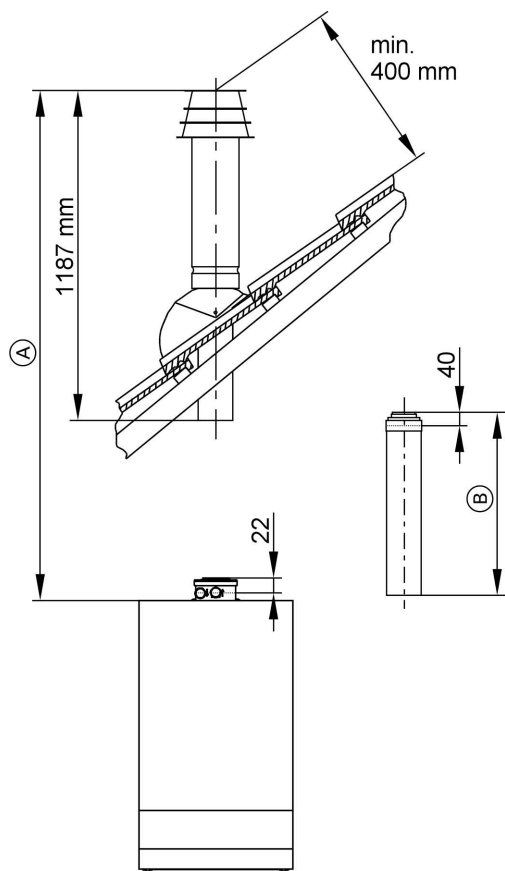


Ⓐ Combined length of flue outlet/ventilation pipe max. 10 m.


Ⓑ Flue outlet/ventilation pipe (can be shortened as necessary)

## Montagevorbereitung (Fortsetzung)


### Elbows and extensions

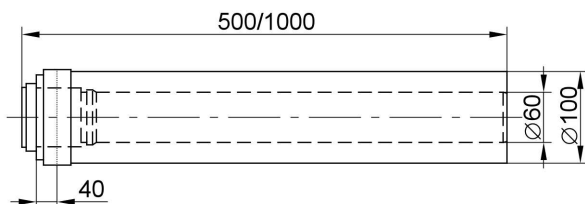

### Extension

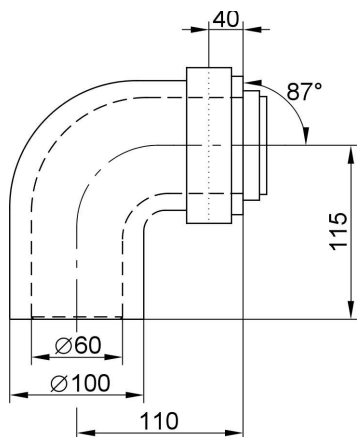

### Elbow 87°

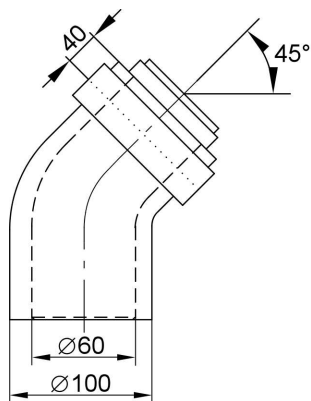


### Elbow 45°

## Montagevorbereitung (Fortsetzung)

### Hydraulic circuit

#### Combi boiler

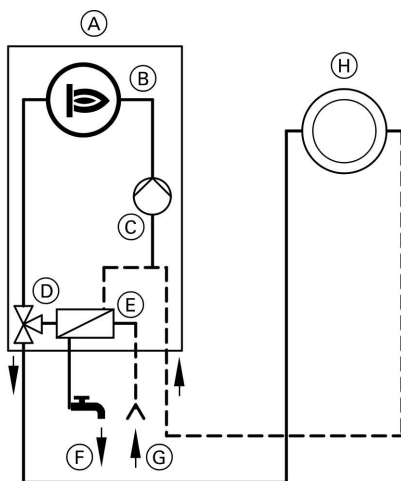


- |                            |                        |
|----------------------------|------------------------|
| Ⓐ Boiler                   | Ⓔ Plate heat exchanger |
| Ⓑ heat exchanger           | Ⓕ DHW outlet           |
| Ⓒ circulation pump         | Ⓖ Cold water inlet     |
| Ⓓ Three-way diverter valve | Ⓗ Heating circuit      |

Montage

## Montagevorbereitung (Fortsetzung)

### System boiler

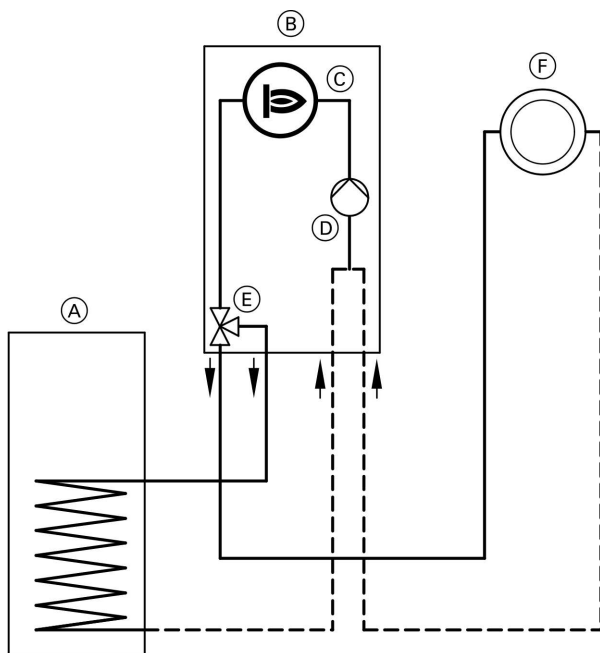


- Ⓐ DHW cylinder
- Ⓑ Boiler
- Ⓒ heat exchanger

- Ⓓ circulation pump
- Ⓔ Three-way diverter valve
- Ⓕ Heating circuit

## Montagevorbereitung (Fortsetzung)

### Sectional Diagram

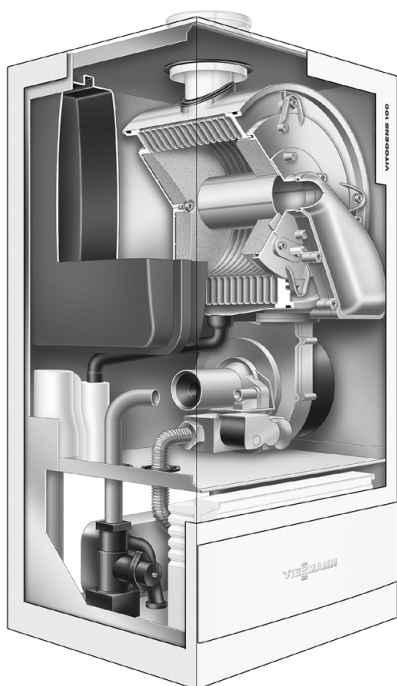

Montage

Combi boiler illustrated

## Installation Requirements

### Statutory Requirements

#### Gas safety (installation and use) regulations (current issue)

It is in your own interest and safety, to ensure that the law is complied with.

## Montagevorbereitung (Fortsetzung)

In addition to the above regulations, this appliance must be installed in accordance with the current IEE Wiring Regulations for electrical installation (BS 7671), local building regulation, the Building Standards (Scotland) (Consolidation) Regulations, bye laws of the local water undertaking and Health and Safety Document No. 635 'The Electricity at Work regulations 1989'.

It should also be in accordance with the relevant recommendations in the current editions of the following British Standards and Codes of Practice: BS 5449, BS 5546, BS 5440:1, BS 5440:2, BS 6798, BS 7593, BS 6891 and IGE/UP/7.

From 1 April 2005, all CORGI Registered Installers will be required to notify CORGI when they have installed or exchanged a gas appliance in a residential dwelling.

CORGI will then issue either a Building Compliance Certificate (for England and Wales) or a Declaration of Safety (for Scotland, Northern Ireland, Isle of Man or appliances out of the scope of Building Regulations) to the homeowner, which will confirm that the work has been carried out by a competent CORGI Registered Installer. This document will be used to form part of the Home Information Pack (HIP) that becomes a requirement from January 2007 in order to sell your house.

- ! **Achtung**
  - Manufacturers instructions must not be taken in any way as overriding statutory obligations.

### Boiler Position

The following limitations must be observed when siting the boiler:


- The boiler is not suitable for external installation. The position selected for installation should be within the building, unless otherwise protected by a suitable enclosure and must allow adequate space for installation, servicing and operation of the appliance and for air circulation around it.
- This position must allow for a suitable flue system and terminal position. The boiler must be installed on a flat vertical wall capable of supporting the weight of the appliance and any ancillary equipment when full.

## Montagevorbereitung (Fortsetzung)

- Due consideration should be given to the routing of the condensate drain from the chosen position.
- If the boiler is to be fitted in a timber framed building it should be fitted in accordance with the British Gas publication 'Guide for Gas Installations In Timber Frame Housing', reference DM2. If in doubt, advice must be sought from British Gas.
- If the appliance is to be installed in a room containing a bath or shower, any electrical switch or control utilising mains electricity, it must be so situated, that it cannot be touched by a person using the bath or shower. Attention is drawn to the requirements of BS 7671 (the current I.E. E Wiring Regulations) and in Scotland the electrical provisions of the Building Regulations applicable in Scotland.
- A compartment used to enclose the appliance must be designed and constructed specifically for this purpose. An existing cupboard or compartment may be used provided it is modified accordingly. BS 5376:2 gives details of the essential features of cupboard / compartment design, including airing cupboards
- Where installation will be in an unusual location, special procedures may be necessary. BS 6798 gives detailed guidance on this aspect.

## Montagevorbereitung (Fortsetzung)

### Flue terminal position Horizontal flue system

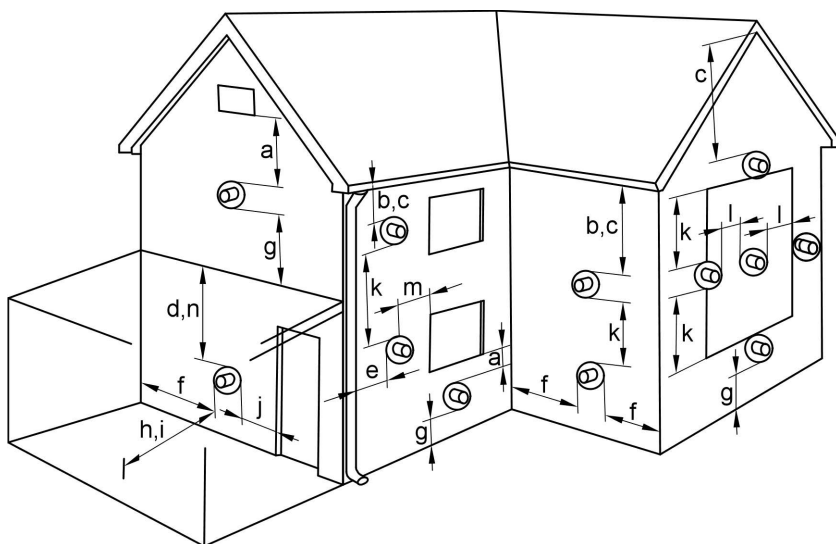


Position		Minimum spacing
		mm
a	Directly below an window that can be opened, air vent or any other ventilation opening	300
b	Below gutter drain or soil pipe	75
c	Below eaves	200
d	Below a balcony	200
e	From vertical drain or soil pipes	150
f	From internal and external corners	300
g	Above adjacent ground or balcony level/roof	300
h	From a surface facing the terminal	600
i	Facing terminals	1200
j	From opening door/window in carport into dwelling	1200
k	Vertically from a terminal on same wall	1500
l	Horizontally from a terminal on same wall	300
m	Adjacent to opening	300
n	Below carport/roof	200

5851 670

## Montagevorbereitung (Fortsetzung)

### Vertical flue systems

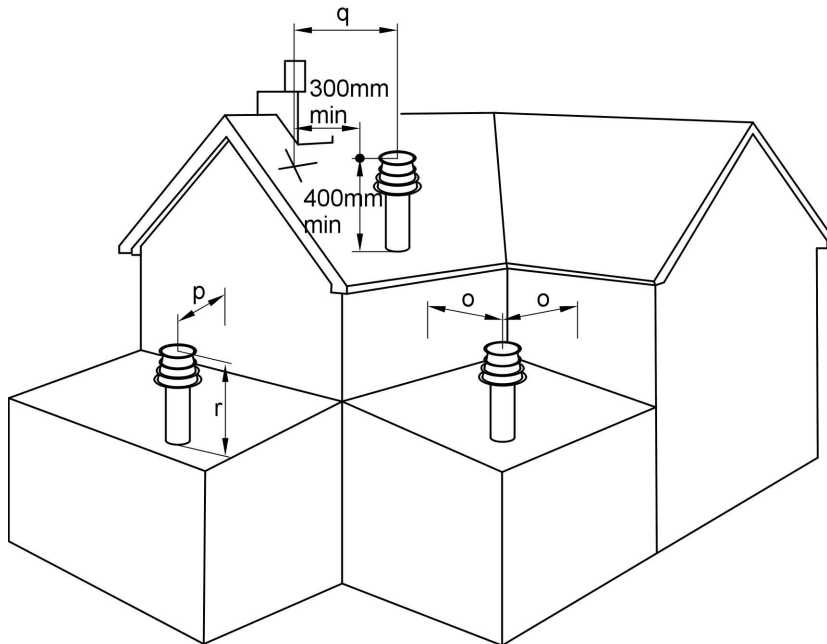

Montage

Position		Minimum spacing mm
o	From adjacent wall	300
p	From adjacent opening window	1000
q	From another terminal	600
r	Minimum height	300

### Flue Terminal Location

Detailed recommendations for flue installation are given in BS 5440:1. The following notes are for general guidance.

- The boiler must be installed so that the terminal is exposed to external air.
- It is important that the position of the terminal allows free passage of air across it at all times.



## Montagevorbereitung (Fortsetzung)

- It is essential to ensure that products of combustion discharging from the terminal cannot re-enter the building or any other adjacent building, through ventilators, windows, doors, other sources of natural air infiltration or forced ventilation / air conditioning.
- The minimum acceptable dimensions from the terminal to obstructions and ventilation openings are specified in on page 16(BS 5440 Part 1).
- If the terminal discharges into a pathway or passageway check that combustion products will not cause nuisance and that the terminal will not obstruct the passageway.
- Where the lowest part of the terminal is fitted less than 2 m above ground, above a balcony or above a flat roof to which people have access, the terminal must be protected by a purpose designed guard. (Available as an optional extra).
- Where the terminal is fitted within 850 mm of a plastic or painted gutter, or 450 mm of painted eaves, an aluminium shield, at least 750 mm long, must be fitted to the underside of the painted surface.
- The air inlet / flue outlet duct must not be closer than 25 mm to combustible material.
- Due to the high efficiency of the boiler the terminal may emit a plume of vapour. This is normal but positions where this would cause a nuisance should be avoided.

## Ventilation Requirements

Detailed recommendations for air supply are given in BS 5440:2. The following notes are for general guidance.

- It is not necessary to have a purpose provided air vent in the room or internal space in which the appliance is installed.
- If the boiler is to be installed in a cupboard or compartment, no permanent air vents are required for cooling purposes in the cupboard or compartment, however, it is essential to ensure that the minimum clearances stated in page 9 are maintained.

## Central Heating System (typical system designs)

- The Vitodens 100 is designed for connection to sealed central heating water systems.
- A sealed system must only be filled by a competent person. Filling the heating system see page 48.

## Montagevorbereitung (Fortsetzung)

### Combination boiler

#### **Hinweis**

*The boiler incorporates an internal bypass to ensure adequate water flow. Certain thermostatic radiator valve manufacturers may require that a bypass valve is fitted in addition to the integral by pass. Specifications as to the individual requirements should be sought prior to installation.*



## Montagevorbereitung (Fortsetzung)

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>Ⓛ Pressure reducing valve (if necessary)</li> <li>Ⓜ Control unit</li> <li>Ⓝ Room temperature control (on site)<br/>Connection of Viessmann Vitotrol 100 see page 42</li> <li>Ⓞ Time switch</li> <li>Ⓟ Frost stat</li> <li>Ⓡ Open therm-connection(alternative)<br/>Connection see page 42</li> <li>Ⓢ Connection box (not supplied)</li> </ul> | <ul style="list-style-type: none"> <li>Ⓣ Fuse 3 A</li> <li>Ⓤ Mains ON/OFF switch</li> <li>Ⓥ When connecting, remove bridge</li> <li>Ⓦ Temporary filling loop</li> <li>Ⓧ Water mains</li> <li>40 Power supply</li> <li>56 Mains connection accessories/ room temperature control/DHW cylinder control</li> </ul> |
|--|---|
- The following Viessmann control configurations are available:  
Constant temperature  
Timer with constant temperature  
Vitotrol 100 UTD
  - The boiler requires a permanent live feed via plug 40.

- LR Connection of room temperature control
- LS Connection of DHW cylinder control


### System boiler

Cylinder connected directly to boiler.

### Hinweis

*The boiler incorporates an internal bypass to ensure adequate water flow, however one radiator should be permanently open (fitted with two lockshield valves) to dissipate any excess heat.*

# **Montagevorbereitung** (Fortsetzung)

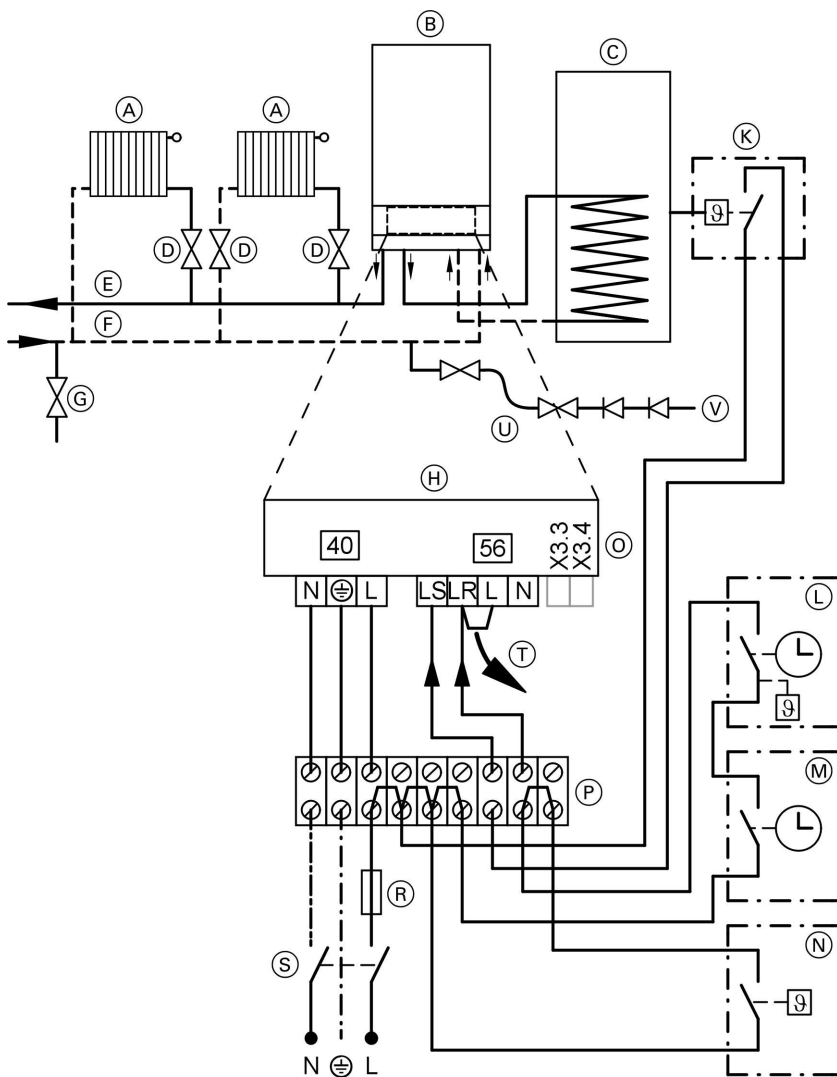

(A) Radiators

(B) Boiler

(C) DHW-Cylinder

(D) Lockshield valve

(E) CH flow

(F) CH return

(G) Drain cock at lowest point in the system

(H) Control unit

(K) Cylinder thermostat


**Montagevorbereitung** (Fortsetzung)

- Ⓐ Room temperature control (on site)  
Connection of Viessmann Vitotrol 100 see page 42
- Ⓜ Time switch
- Ⓝ Frost stat
- Ⓞ Open therm-connection(alternative)  
Connection see page 42
- Ⓟ Connection box (not supplied)
- Ⓡ Fuse 3 A
- Ⓢ Mains ON/OFF switch
- The following Viessmann control configurations are available:  
Constant temperature  
Timer with constant temperature  
Vitotrol 100 UTD
- The boiler requires a permanent live feed via plug 40.
- Ⓣ When connecting, remove bridge
- Ⓤ Temporary filling loop
- Ⓥ Water mains
- 40 Power supply
- 56 Mains connection accessories/  
room temperature control/DHW  
cylinder control
- LR Connection of room temperature control
- LS Connection of DHW cylinder control
- The DHW cylinder must have an integrated temperature control connected to the Vitodens 100
- The DHW will always take priority over the central heating when timed demand is selected.

**Hydraulic components in the boiler****Pump**

The available head shown in following figure is that in excess of the appliance hydraulic resistance, i.e that available for the system.

Montagevorbereitung (Fortsetzung)

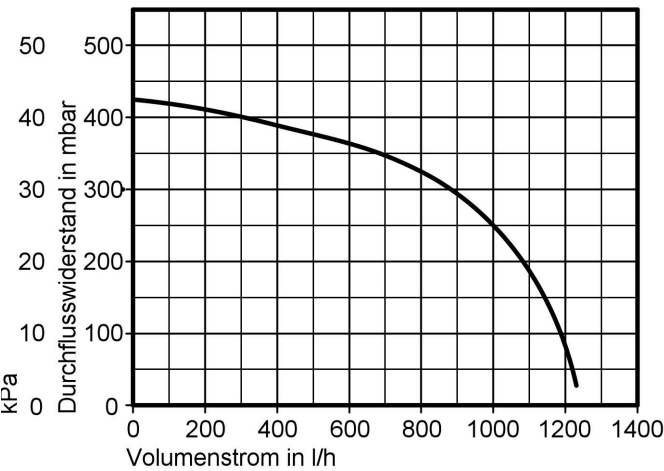

Expansion vessel

The table shows the maximum system volume that the integral expansion vessel can sustain under different charge pressure conditions. If the system volume exceeds that shown, an additional expansion vessel must be fitted and connected to the heating system primary return pipe as close as possible to the appliance. If an extra vessel is required, ensure that the total capacity of both vessels is adequate.

Further details are available in the current issues of BS 5449 and BS 6798.  
*If the pressure gauge rises by 1.5 bar when the appliance is at maximum temperature with all radiators in circulation an extra expansion vessel is required.*

Vessel charge and initial system pressure	bar	0.5	1.0	1.5
	psi	7.3	14.5	21.5
Total water content of system using 8 litre capacity expansion vessel supplied with appliance	litres	106	75	42
	gallons	23	16.5	9
For systems having larger capacity, multiply the total system capacity in litres by the factor to obtain the total minimum expansion vessel capacity required		0.0833	0.11	0.16

5851 670

**Montagevorbereitung** (Fortsetzung)**Pressure relief valve**

A pressure relief valve set at 3 bar (43.5 psi) is supplied with the appliance.

**Domestic Hot Water System (Combi boiler only)**

- Check that the mains water pressure is sufficient to produce the required DHW flow rate of 9.0 l/min (24 kW)/12.0 l/min (30 kW), but does not exceed the maximum DHW pressure (10 bar). If necessary, a pressure reducing valve must be fitted to the mains supply before the DHW inlet connection.
- The final 600 mm (24 in) of the mains supply pipe to the boiler must be copper.
- A regulator is fitted to control the maximum water flow rate.
- If the appliance is installed in an area where the temporary hardness of the water supply is high (over 150 ppm) the fitting of an in line scale inhibitor may be an advantage. Consult the Local Water Authority if in doubt.
- For specific information relating to fittings (e.g.. showers, washing machines etc) suitable for connection in the DHW circuit, consult the Local Water Authority. However, the following information is given for guidance.  
Domestic hot/cold water supply taps and mixing taps: All equipment designed for use at mains water pressure is suitable.  
Showers and bidets: Any mains pressure shower or bidet complying with the Local Water Authority regulations is suitable.

**Gas Supply**

- The Gas Supplier should be consulted at the installation planning stage in order to establish the availability and supply of an adequate supply of gas.
- A gas meter can only be connected by the gas supplier or by their contractor.
- An existing meter and / or pipework should be of sufficient size to carry the maximum boiler input plus the demand of any other installed appliance. (BS 6891: 1988). A minimum of 22 mm dia. pipework is required to within 1 metre of the appliance gas cock.
- The governor at the meter must give a constant outlet pressure of 21 mbar +/- 1mbar. when the appliance is running.

## Montagevorbereitung (Fortsetzung)

- The gas supply line should be purged.  
**Warning:** Before purging open all doors and windows, also extinguish any cigarettes, pipes and any other naked lights.
- The complete installation must be tested for gas soundness.

### Electricity Supply

- Wiring external to the appliance must be in accordance with BS 7671 (the current I.E.E Wiring Regulations) for electrical installation and any local regulations which apply.
- The mains cable must be at least 0.75 mm<sup>2</sup> (24/0.2 mm) PVC insulated to BS 6500 table 16.
- **Warning:** This Appliance must be earthed. (Failure to provide a satisfactory earth connection would be a safety hazard and may also result in appliance malfunction).
- The method of connection to the mains supply must facilitate complete electrical isolation of the appliance. Either a 3A fused three pin plug and unswitched shuttered socket outlet, both complying with BS 1363, or a 3A fused double pole switch having a 3 mm contact separation in both poles and serving only the boiler (and its external controls) may be used.

### External Controls

To ensure optimum performance, Viessmann offer a range of external controls however the appliance may be used with any certificated room thermostat or time clock room thermostat.

**Montagevorbereitung** (Fortsetzung)**Preparations for boiler installation****Unpacking the appliance**

The appliance is supplied in 2 separate packages plus any optional flue packages. Check the availability and contents of each package before commencing the installation.

**Boiler package****Combi boiler**

- Boiler (assembled)
- 5 shut-off valves
- Wall mounting fixture
- 2 wall plugs and 2 screws
- Installation template


**System boiler**

- Boiler (assembled)
- 3 shut-off valves
- 2 connection elbows
- Wall mounting fixture
- 2 wall plugs and 2 screws
- Installation template

**Wall mounting bracket installation**

Important: Before installing the appliance, check that the chosen position is suitable, adequate installation clearances are available and that the requirements for flue terminal position are satisfied.

## Montagevorbereitung (Fortsetzung)

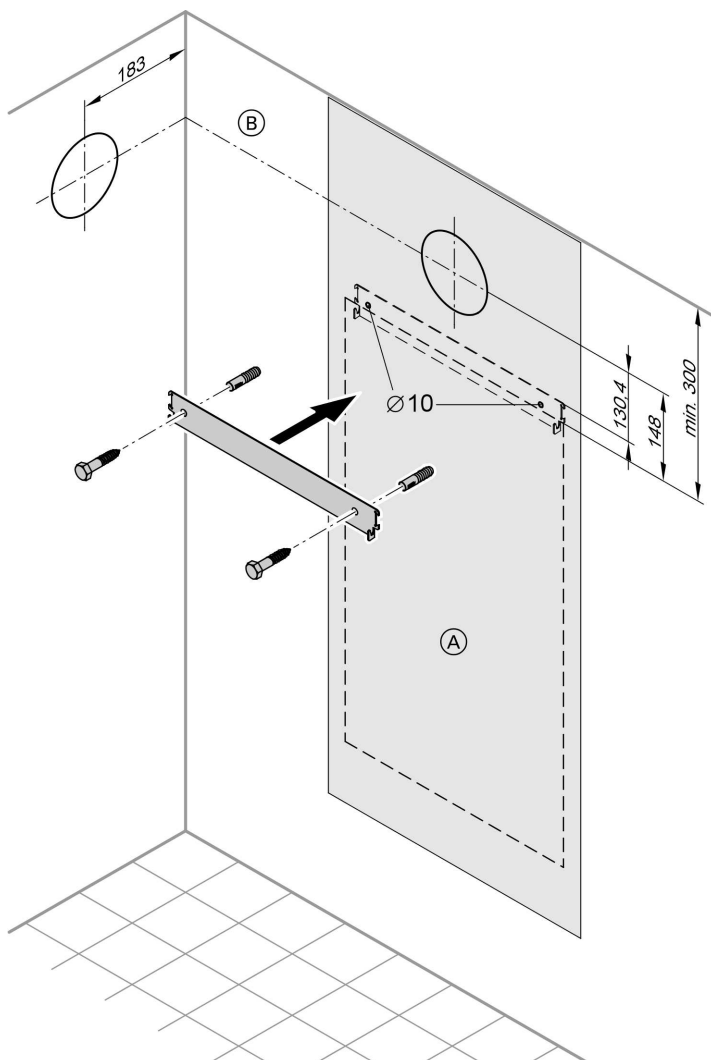

Ⓐ Installation template

Ⓑ Observe the minimum slope of 3° (5mm/m) towards the boiler

1. Position the installation template on the wall.

2. Mark wall plug holes and balanced flue pipe opening.



## Montagevorbereitung (Fortsetzung)

3. Drill  $\varnothing$ 10 mm holes and insert the rawl plugs.
4. Cut flue pipe opening to 100 mm  $\varnothing$ .
5. Fit wall mounting frame with enclosed screws.

### Preparing the connections

#### **Hinweis**

*For dimensions for on-site preparations of the gas and water side connections see „Overall Appliance Dimensions“ on page 7.*


1. Prepare the water connections.
2. Clean and flush the heating system.  
Use only the following additives:
  - Cleanser (Ferrox)
  - Sentinal X300...
3. Prepare gas connection to BS 6891.
4. Prepare the electrical connections.
  - Mains cable: H05V2V2-F 3 G 1,0 mm<sup>2</sup>, 230 V~, 50 Hz.  
A 1.5m power cable is part of the standard delivery.
  - Accessory cables: H05V2V2-F 3 G 1.0 mm<sup>2</sup> for connection of room temperature control and DHW cylinder control (system boiler).

## Installing the boiler and making all connections

### Remove front panel and mount boiler

**Hinweis**


*The front panel must be removed before mounting the boiler.*

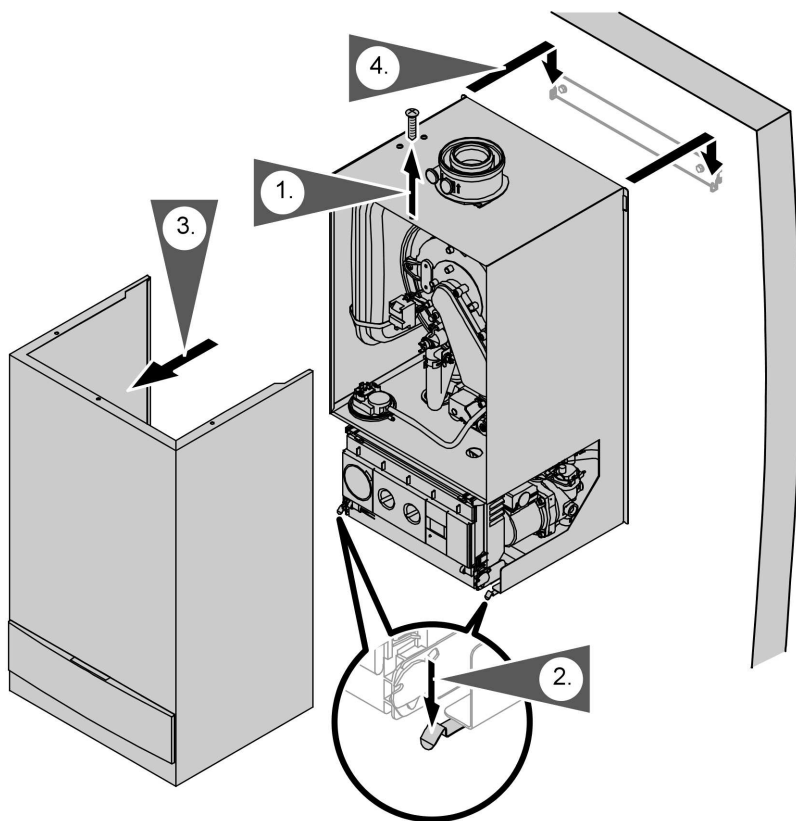

1. Remove the screw at the top of the boiler.
2. Press down the springs on the underside of the boiler and remove the front panel.
3. Hook the boiler on to the wall mounting frame.

## Installing the boiler and making all connections (Fortsetzung)

### Gas connection

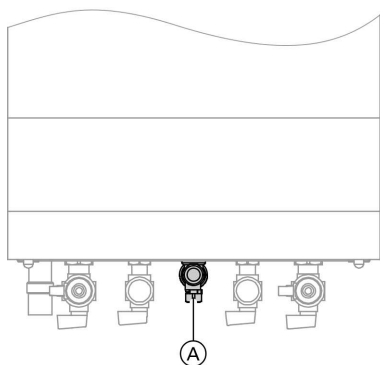


1. Connect the gas supply to the gas inlet connection on the gas cock (A). Upon completion, tighten the union connection.
2. Carry out a gas soundness test.
3. Purge the gas supply pipe.

(A) Gas connection: ½ BSP

### Installing water fittings

#### Combi boiler

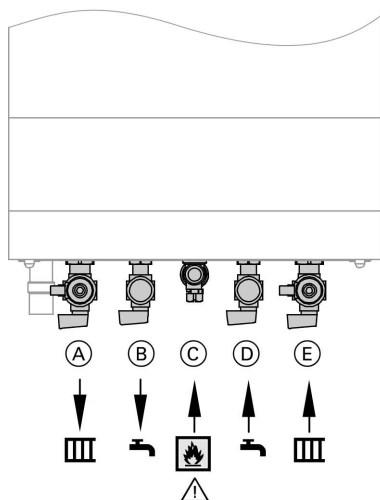


## Montageablauf

### Installing the boiler and making all connections (Fortsetzung)

- Ⓐ Heating flow: Ø22 mm (red toggle)
- Ⓑ DHW: Ø15 mm
- Ⓒ Gas connection: ½ BSP
- Ⓓ Cold water: Ø15 mm
- Ⓔ Heating return: Ø22 mm (blue toggle)

#### System boiler

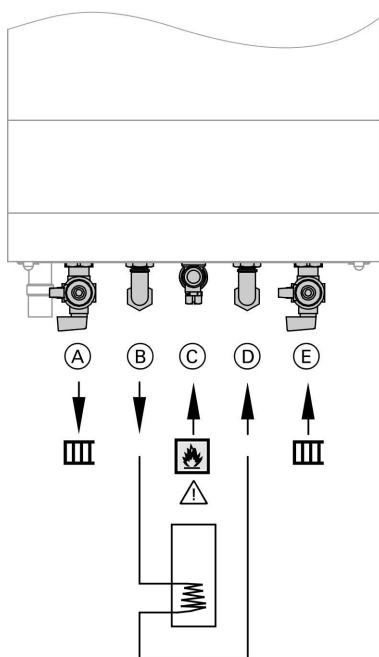


#### Hinweis

For operation without a DHW cylinder, shut-off connections Ⓑ and Ⓓ.

- Ⓐ Heating flow: Ø22 mm (red toggle)
- Ⓑ DHW cylinder flow: Ø22 mm
- Ⓒ Gas connection: ½ BSP
- Ⓓ DHW return: Ø22 mm
- Ⓔ Heating return: Ø22 mm (blue toggle)

## Installing the boiler and making all connections (Fortsetzung)

### Connect safety valve drain

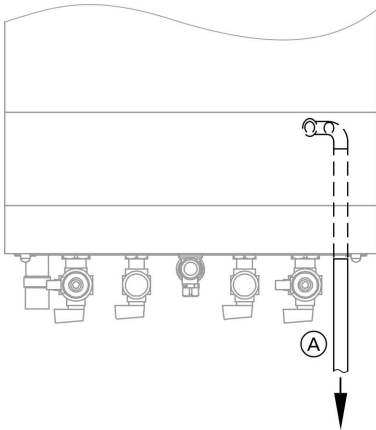

Ⓐ Ø15 mm

Connect a suitable discharge pipe to the pressure relief valve outlet. The pipe discharging to a safe place must be a minimum of 15 mm copper and run continually downwards.

The pipe from the pressure relief valve must not discharge above an entrance, window or any type of public access area.


The pipe must be routed to a position so that any discharge of water possibly boiling, or steam, cannot create any danger to persons, damage to property or external electric components and wiring. The point of discharge must be clearly visible.

To ease future servicing it is advisable to use a compression type fitting to extend the discharge pipe.

## Installing the boiler and making all connections (Fortsetzung)

### Condensate connection

Vitodens 100 has within a syphonic condensate trap.

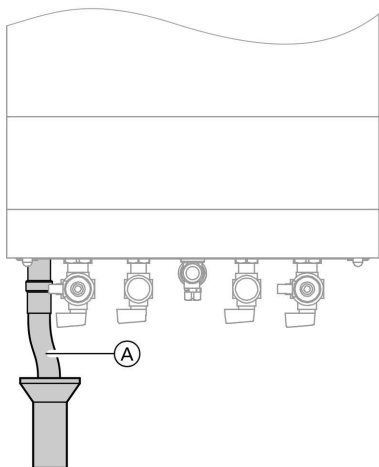


Ⓐ Ø22 mm plastic condensate pipe

### Routing

The condensate pipe can terminate into any one of the following areas.  
It is always the best practice to terminate the condensate pipe via an internal waste system.


- The pipe run should take the shortest practical route with a downward slope of at least 2.5 ° (4.5 mm/m)
- The external pipework should be insulated to prevent freezing
- The pipework should terminate as close as possible to the ground or drain, whilst still allowing the condensate to safely disperse.
- The condensate pipe must be of non corrosive material, preferably plastic.  
Note: ferrous materials or copper must not be used.

## Installing the boiler and making all connections (Fortsetzung)

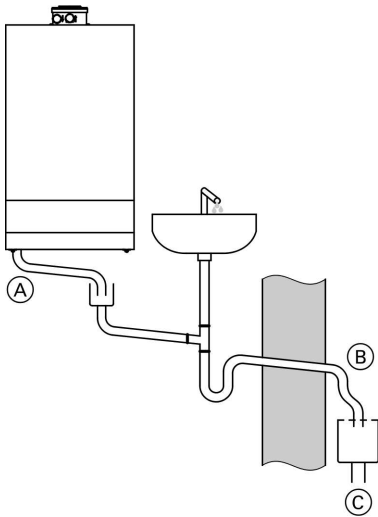

Terminating into an internal waste system


- (A) Ø22 mm plastic condensate pipe
- (B) External length of pipe 3 m max.
- (C) Open end direct into gully, below ground but above water level

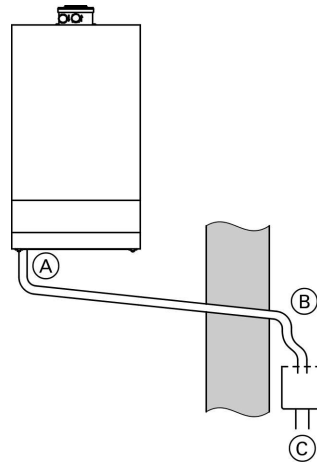

Terminating into an external waste system


- (A) Ø22 mm plastic condensate pipe
- (B) External length of pipe 3 m max.
- (C) Open end direct into gully, below ground but above water level

## Installing the boiler and making all connections (Fortsetzung)

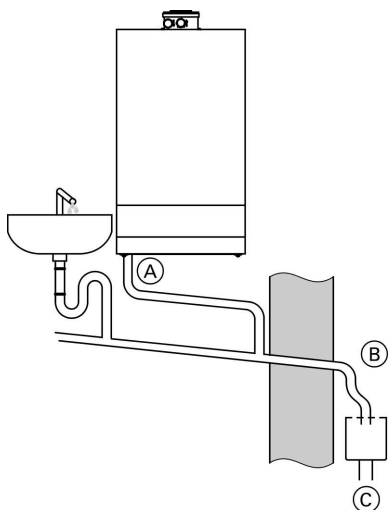

Terminating into an external purpose made soakaway


- (A) Ø22 mm plastic condensate pipe
- (B) External length of pipe 3 m max.
- (C) Open end direct into gully, below ground but above water level

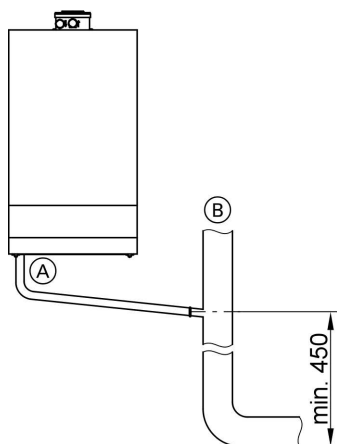

Terminating into the rainwater system

- (A) Ø22 mm plastic condensate pipe
- (B) Internal soil and vent stack

## Filling the siphon with water

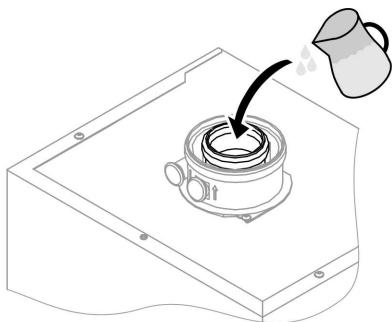

Fill a minimum of 0.3 l of water into the boiler connect kit flue outlet.




### Achtung

At initial start-up, flue gas may be emitted from the condensate drain.

Fill the siphon with water before start-up.

## Flue outlet


### External wall terminal C13x

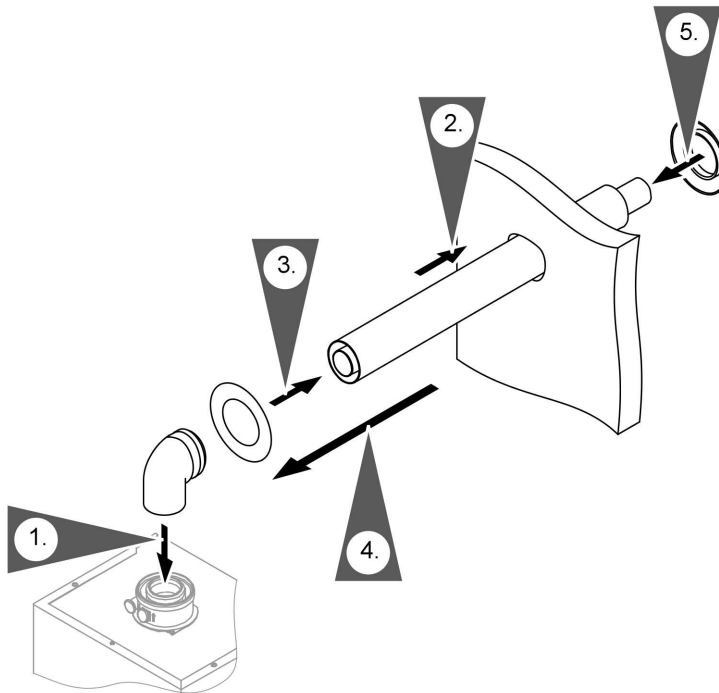

1. Insert pipe bend into the boiler flue outlet.
2. Insert external flue terminal into the wall outlet.
3. Secure the wall bezel internally.
4. Connect external flue terminal to pipe bend.  
Install flue and supply pipes accordingly, with a minimum of 3° slope (ca. 50 mm/m) towards the boiler.
5. Secure the wall bezel externally.

**Flue outlet** (Fortsetzung)

**Vertical roof terminal C33x**

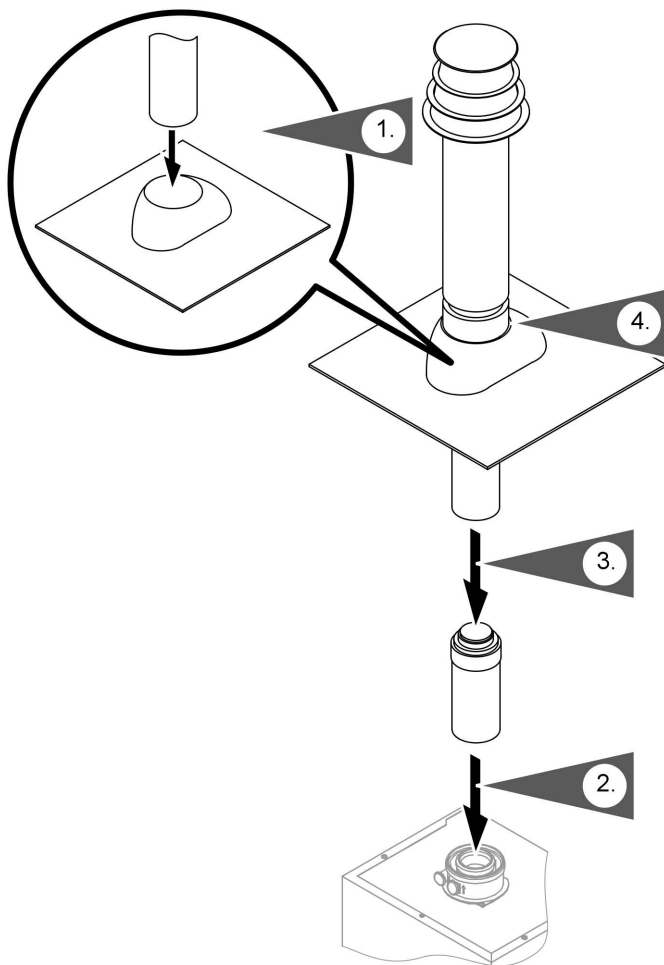

1. Install the universal roof tile.


2. Install flue and supply pipes accordingly.

3. Push roof terminal through roof and insert into flue/supply pipe.

4. Seal roof terminal.

## Electrical connections

### Opening the control unit housing

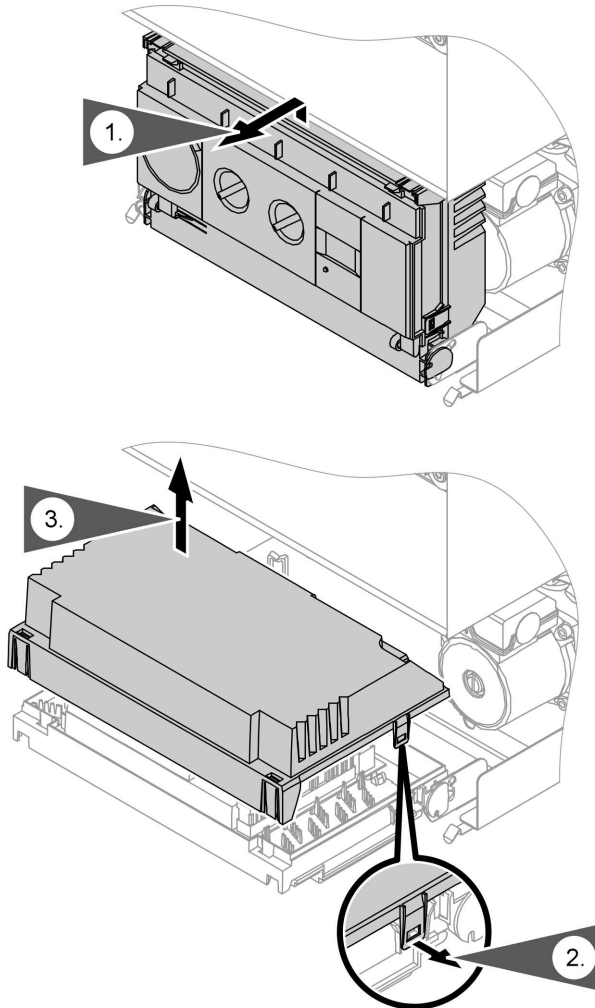

Montage

## Electrical connections (Fortsetzung)

### Making connections




#### **Notes regarding the connection of accessories**

For details of accessories, also observe the separate installation instructions provided.

#### ***Notes regarding the connection of room temperature and DHW cylinder temperature control***

*For more information about the connection of on site temperature controls see page 20.*

## Electrical connections (Fortsetzung)

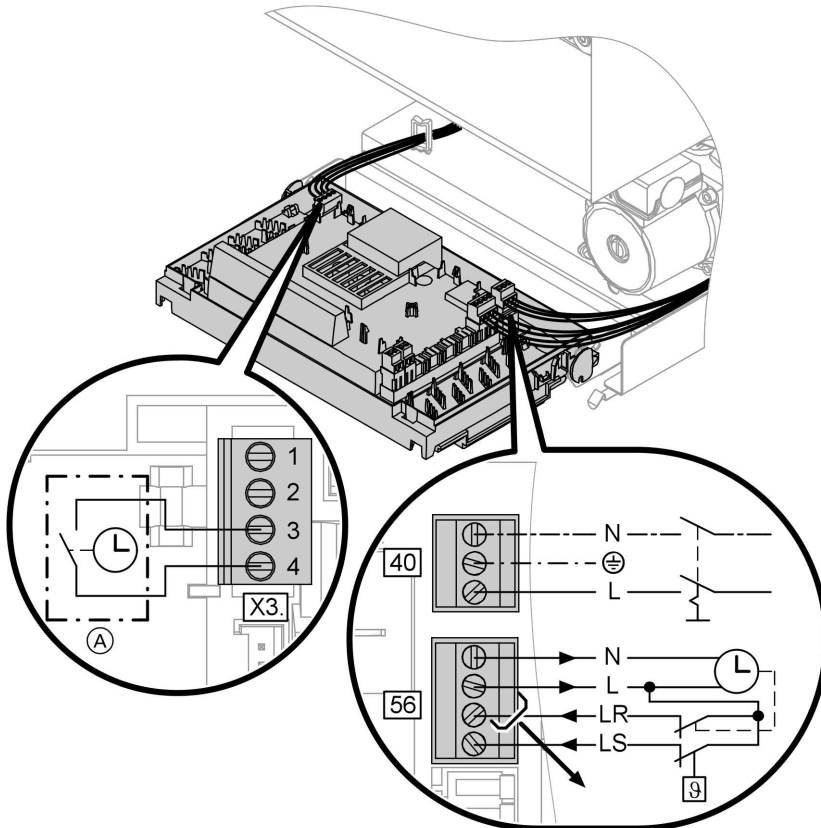

- 40** Mains power connection 230 V ~ 50 Hz (green plug)  
Do not interchange the supply conductors L1 and the neutral conductor N.  
A two pole shut off switch with a contact separation of at least 3 mm must be fitted in the mains supply to the boiler with a maximum fuse value of 3 A.  
A 1.5m power cable is part of the standard delivery.

- 56** Mains connection accessories/ room temperature control/DHW cylinder control (black plug)  
**A** Room temperature control with zero volt contact e.g. Vitotrol 100 UTD  
If making the connection between „L“ and „LR“ remove jumper**56**.

## Electrical connections (Fortsetzung)


LR Connection of room temperature control

- Vitotrol 100 UTA
- Vitotrol 100 UTD


If making the connection between „L“ and „LR“ remove jumper.

LS Connection of DHW cylinder control

### Connect DHW cylinder temperature control

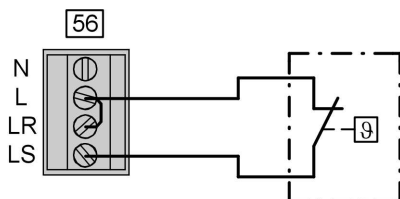

### Connect Vitotrol 100

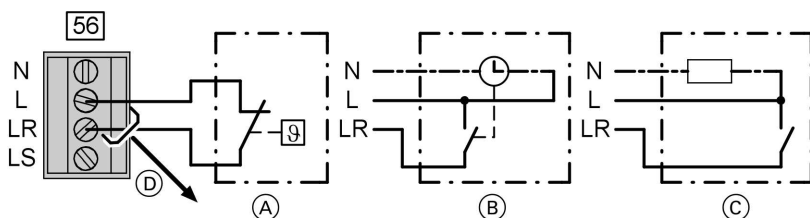

(A) Vitotrol 100 UTD

(B) Vitotrol 100 UTA

(C) When connecting, remove link


### Routing connecting cables



#### Achtung

Connecting cables can be damaged if they touch hot components. When routing and securing connecting cables on site, ensure that the maximum permissible cable temperatures are not exceeded.

## Electrical connections (Fortsetzung)

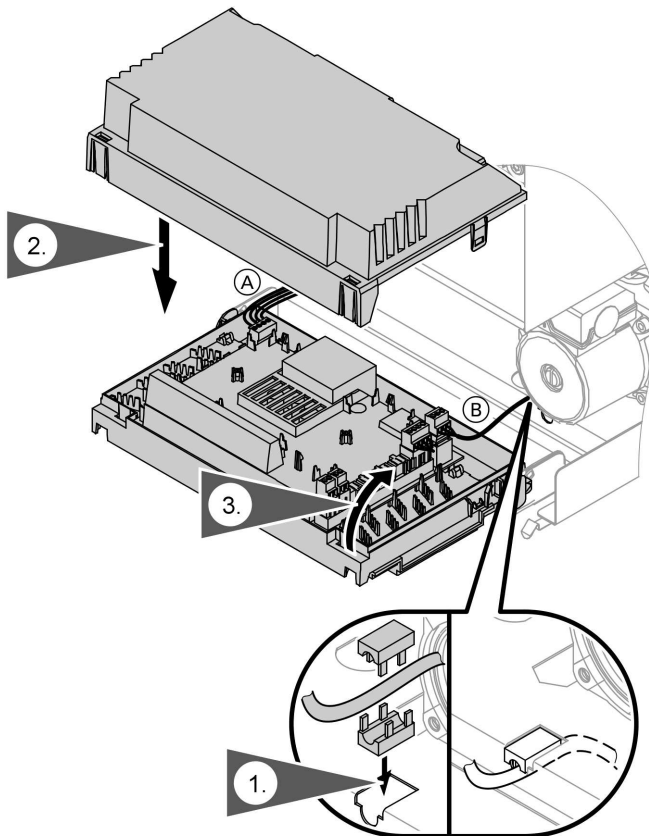

Ⓐ Low voltage connections

Ⓑ 230 V connections


1. Connect strain relief to the external cable and clip into the mounting plate aperture.

2. Fit cover.

3. Pivot the control unit upwards.

## Electrical connections (Fortsetzung)

### Front panel installation

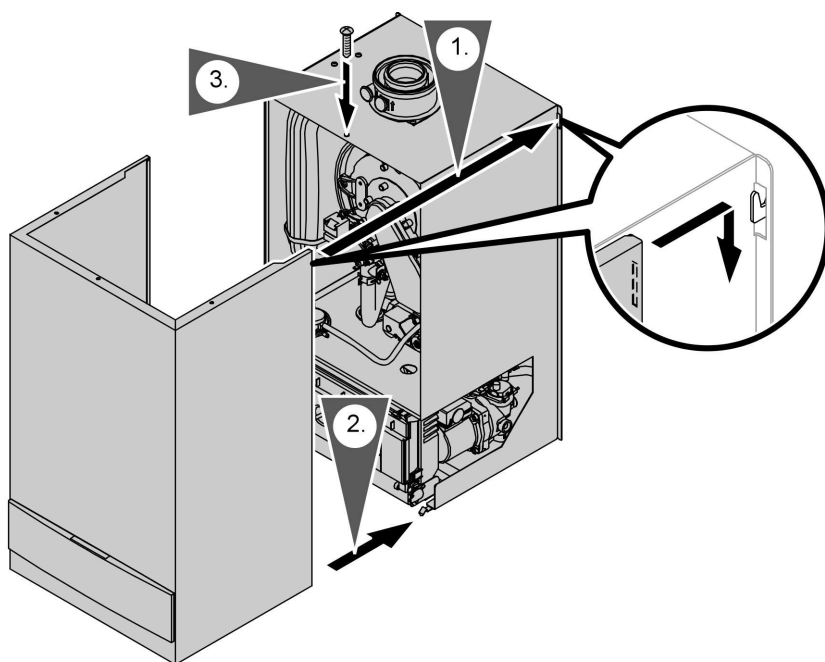

1. Hang the front panel to the wall mounting frame by the appropriate hook.

2. Press down the front panel at the bottom.

3. Insert the screw at the top of the boiler.

#### **Hinweis**

*The outer case forms a seal with the combustion box. It must therefore be securely fitted with the screw provided.*

## Commissioning and testing

Before commissioning the appliance, the whole gas installation including the meter must be purged and tested for gas soundness in accordance with BS 6891: 1988.

## Commissioning and testing (Fortsetzung)



### Gefahr

Open all doors and windows; extinguish naked lights and **do not smoke** whilst purging the gas line.

Before commencing the commissioning procedure, ensure that the gas service cock is turned on, the electricity supply is isolated and that the DHW and CH pipework is complete.

Fill the system with cold water. It may be convenient to carry out this procedure before fitting the boiler to the piping frame. Vent the system via the radiator valves and system air vents in accordance with normal practice, close all air vents and check for system soundness. Drain the entire system to flush out any debris.

**Additives from the approved list below may be used. The use of non approved additives will invalidate the warranty on this product.**

- Anti-scaling: Sentinel X200
- Anti-bacterial:
  - System Cleaner (Fernox)
  - Sentinel X300...
- Anti-freeze:
  - Glycol (30% max.)
  - Antifreeze (Fernox)
  - Sentinel X500...
- Anti-corrosion:
  - Inhibitor (Fernox)
  - Sentinel X100...
- Cleaner:
  - Cleanser (Fernox)
  - Sentinel X300...

**Do not use non approved additives or any chemicals from the following list**

- Boiler noise silencer
- Leak sealer
- Fuel, Oil, Grease, Washing powder/liquid
- pipe jointing compound (like boss white and boss green, Sentinel)
- Anti-blockage

## Commissioning and testing (Fortsetzung)

### Hinweis

Additive combinations are permitted only if approved additive suppliers recommend it and always according to supplier's dosage recommendation.

It is essential that the procedure below is followed to ensure that all the air in the boiler heat exchanger and the system is completely vented prior to firing the appliance.




## Filling the heating system




### Achtung

Unsuitable fill water increases the level of deposits and corrosion and may lead to boiler damage.

- Thoroughly flush the entire heating system prior to filling with water.
- Only use fill water of potable quality.
- Soften fill water harder than 150 ppm temporary hardness.
- Inhibitors or antifreeze additives suitable for heating systems should be injected or added manually.

1. Close the gas shut-off valve.
2. Only when operating with DHW cylinder: Prevent heat demand from the DHW cylinder.
3. Switch on mains supply and turn rotary selectors „“ and „“ counterclockwise to the end stop (turn selector „“ only for system boiler).

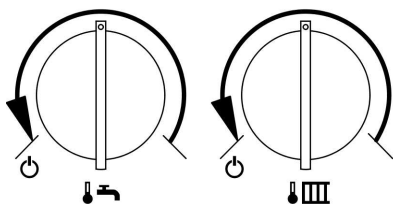


### Hinweis

The display will show the actual operating pressure and the circulation pump is switched on.



## Commissioning and testing (Fortsetzung)

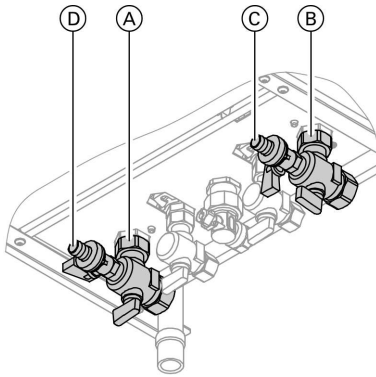


4. Close the shut off valves (A) and (C) to prevent water leaving the boiler (toggle at 90° to the pipe). Connect a hose pipe to outlet (D) ready to vent the boiler later.

5. Turn valve (B) to the draining position (toggle to the front). This will allow the system pressure reading to be displayed on the boiler control panel.

6. Fill and vent the system through your external temporary filling loop ensuring that most of the air has been removed from all drain and vent points on the system.


7. Turn on valve (B) (toggle to the rear) to allow water into the boiler and at the same time turn valve (A) to the draining position (toggle to the front) with the drain toggle open (a jubilee type clip will ensure no water loss and secure the hose in place on the drain point).

8. Fill heating system. (minimum system pressure > 1.0 bar).  
The actual system pressure is displayed electronically on the boiler display.

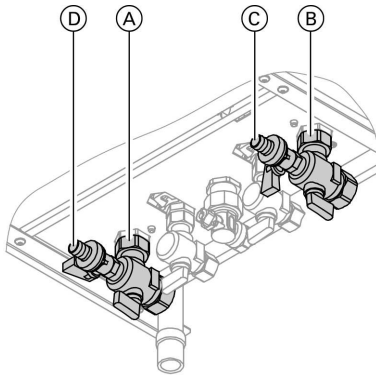

## Commissioning and testing (Fortsetzung)

### Venting the boiler by flushing out (after venting system)

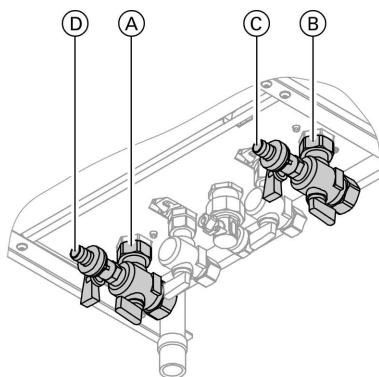

1. Leaving the hose connections from filling the system continue to fill the boiler from the external filling loop and draining the water to a drain from connection ①D.
2. Continue flushing the water through the boiler until no air pockets are discharged out of the drain hose.
3. Slowly turn off the valve ①D and turn off the temporary filling loop to regulate the pressure in the boiler and system to approx 1.2 bar.
4. Turn valve ①A to open position (toggle to rear).
5. Turn on the appliance to circulate the pump in both DHW and CH positions in order to continue venting.


#### **Hinweis**

*It is essential that there is no air in the heat exchanger and the system prior to firing the appliance. This will cause an F7 fault and prevent you finishing the installation without hinderance.*

*After 12 minutes the electronic board switches into the DHW modus. Turn rotary selector „III“ clockwise for two seconds into the middle position, then turn rotary selector „III“ counterclockwise back to the end stop.*



## Commissioning and testing (Fortsetzung)

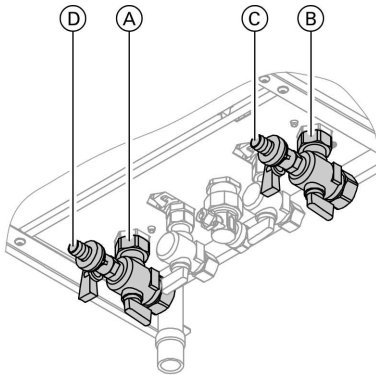


6. Ensure both isolation valves (A) and (B) to operating position (toggle to the rear), seal with the caps provided.
7. Turn temperature gauge controls to the desired operating position.

### Hinweis

*Be aware that the boiler may still need to be vented as air pockets are drawn into the heat exchanger.*

8. Turn rotary selectors „III“ and „I“ into control range again (turn selector „III“ only for system boiler).

## Filling the Domestic Hot Water Circuit (Combi boiler only)

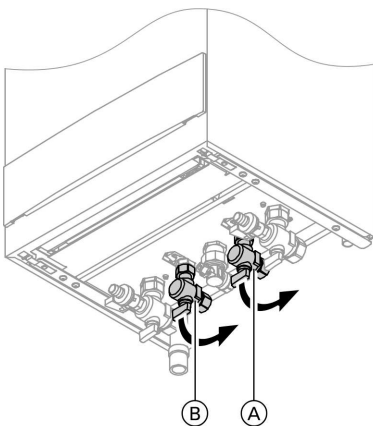

1. Open the DHW inlet valve (A) and outlet valve (B).
2. Open all DHW taps in turn to vent any air from the DHW pipework.

## Commissioning and testing (Fortsetzung)


### Checking static and supply pressure



#### Gefahr

CO formation, as a result of incorrect burner adjustment, can lead to severe health problems.

Carry out a CO test prior to, and after, work on gas equipment.

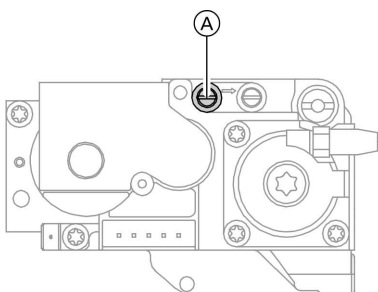

1. Close the gas shut-off valve.
2. Release the screw inside test nipple „IN“ (A) on the gas combination valve, but do not remove, and connect the pressure gauge.
3. Open the gas shut-off valve.
4. Check the static pressure; it should be 20 mbar +/- 1mbar.
5. Switch on mains voltage and start up the boiler.

#### Hinweis

*During commissioning, the boiler can enter a fault state because of airlocks in the gas pipe.*

*To reset press „I“ key. The ignition procedure will then be repeated.*

6. Check the inlet working pressure = 20 mbar.
  - Minimum working pressure = 12 mbar
  - Maximum working pressure = 20 mbar

#### Hinweis

*Use suitable test equipment, with a resolution of at least 0.5 mbar, to measure the supply pressure.*



## Commissioning and testing (Fortsetzung)

7. Shut down the boiler, close the gas shut-off valve, remove the pressure gauge, and close test nipple (A) with the screw.
8. Open the gas shut-off valve and start the boiler.




### Gefahr


Gas escaping from the test nipple leads to a risk of explosion.

Check test nipple (A) for soundness.

## Domestic hot water flow rate and temperature (Combi boiler only)

A flow regulator is fitted to ensure that no adjustment of maximum flow is necessary.

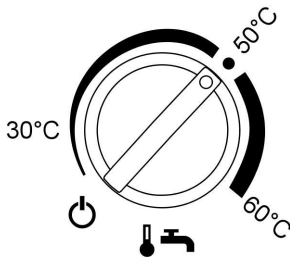


Setting DHW temperature:  
Set rotary selector  to the desired DHW temperature.

## Adjusting the boiler water temperature

The boiler water temperature must be set at an adequate level to satisfy the requirements of the heating system.

## Commissioning and testing (Fortsetzung)

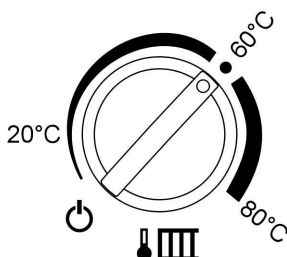

Selecting the boiler water temperature:

Set rotary selector  to the desired DHW temperature.

### Final checks

1. If a time switch has been built into the control unit:  
Set required activation periods as per the time switch operating instructions.
2. Fill in the relevant details for the installation in the benchmark log-book supplied in the instructions pack and affix the self adhesive bar code strip from the outside of the boiler packaging to this logbook.



Time switch operating instructions

### User's instructions

Upon completion of commissioning and testing, hand the appliance over to the user, with reference to the following.


- Give the users instructions to the responsible person for the property and emphasise their responsibilities under the current edition of the Gas Safety (Installation and Use) Regulations.
- Explain and demonstrate the lighting and shutdown procedures.
- Advise the householder on the efficient use of the system, including the use and adjustment of all system controls for both DHW and CH.
- Advise the user of the precautions necessary to prevent damage to the system and to the building in the event of the system remaining inoperative during frost conditions.
- Explain the function of the boiler safety controls and how to reset them. Emphasise that if cut-out persists, the boiler should be turned off and the installer or service engineer consulted.
- Stress the importance of an annual service by a registered heating engineer.

## Routine Servicing Instructions

To ensure continued efficient operation of the appliance, it is recommended that it is checked and serviced as necessary at regular intervals. The frequency of servicing will depend upon the particular installation conditions and usage but in general once a year should be adequate. It is the law that any service work must be carried out by a competent CORGI registered person.

The boiler incorporates a flue sampling point in front of the flue outlet. The flue gases can be analysed if required. The push fit cap may be removed and a sample tube fitted. The push fit cap must be replaced after use. The flue gas sample will enable the service engineer to judge whether any major action is required. Before commencing any service operation, isolate the mains electrical supply and turn off the gas supply at the main service cock.


### Removing front panel

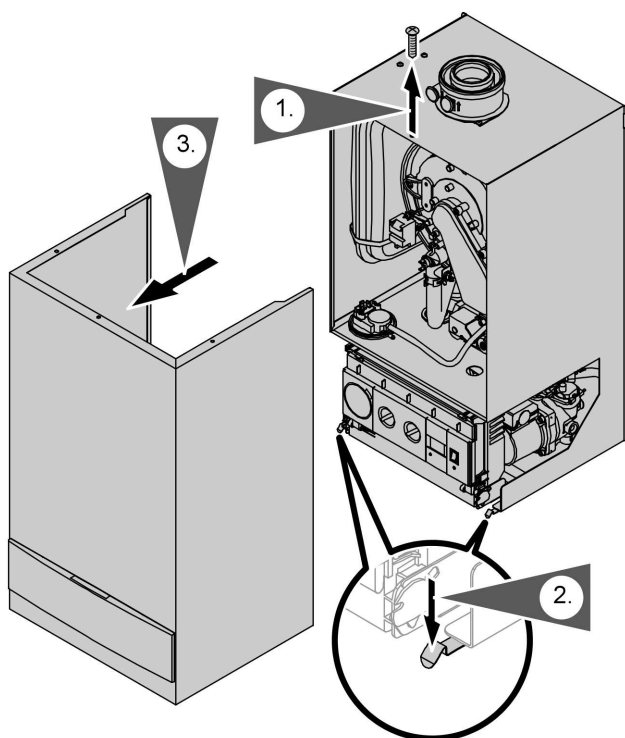

## Routine Servicing Instructions (Fortsetzung)

1. Remove the screw at the top of the boiler.
2. Press down the springs on the underside of the boiler and remove the front panel.
3. Lift the front panel from the wall mounting frame.

### Burner removal

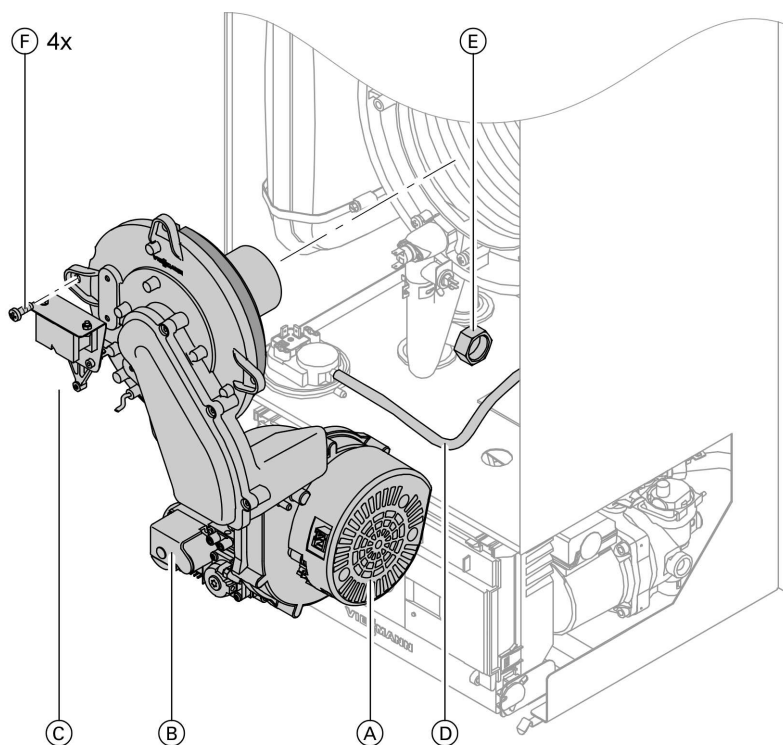

1. Switch OFF the mains power.
2. Close the gas shut-off valve and safeguard against reopening.
3. Pull electrical cables from fan motor (A), gas train (B), and ignition unit (E).
4. Remove connection hose from air pressure switch (D).

## Routine Servicing Instructions (Fortsetzung)


5. Release gas connection pipe (E).
6. Release four screws (F) and remove the burner.

**!** **Achtung**  
To prevent damage,  
never rest the burner on the  
gauze assembly.

### Check the burner gasket and burner gauze assembly for damage.

Check the burner gasket (A) for damage and replace if necessary.



Replace the burner gauze assembly if it is damaged.

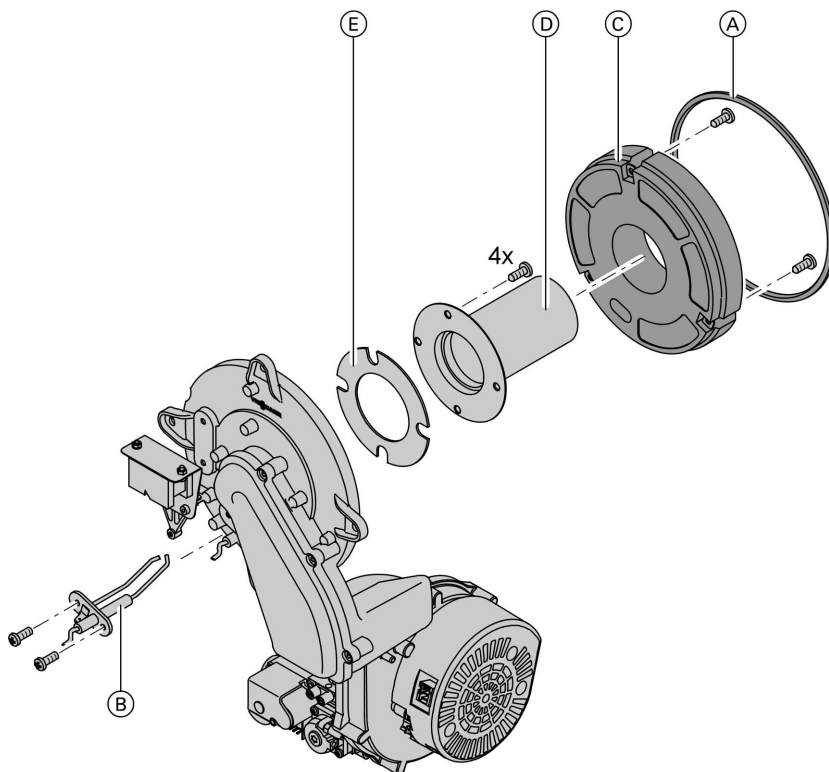

## Routine Servicing Instructions (Fortsetzung)

1. Remove electrode (B).
2. Release the three Torx screws, and remove thermal insulating ring (C).
3. Release the four Torx screws, and remove burner gauze assembly (D) with its gasket (E).
4. Insert and secure a new burner gauze assembly (D) with a new gasket (E).  
Torque: 3.5 Nm.approx.
5. Refit the thermal insulation ring (C).
6. Refit the electrode (B).  
Torque: 2.5 Nm.approx.

## Checking and adjusting the ignition and ionisation electrodes

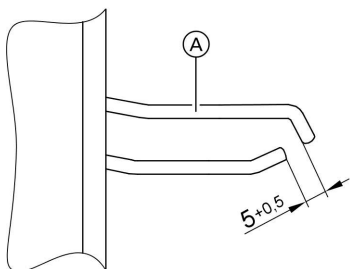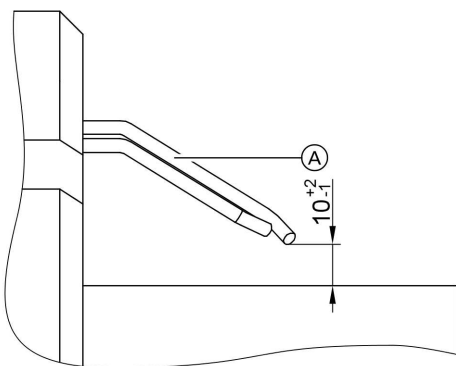

(A) Ignition and ionisation electrode


1. Check the electrode for wear and contamination.
2. Clean the electrode with a small brush (not with a wire brush) or emery paper.



## Routine Servicing Instructions (Fortsetzung)

3. Check all clearances. If the gaps are not as specified or the electrode is damaged, replace and align the electrode together with new gaskets. Tighten the electrode fixing screws. (2.5 Nm approx.).

## Cleaning the heating surfaces

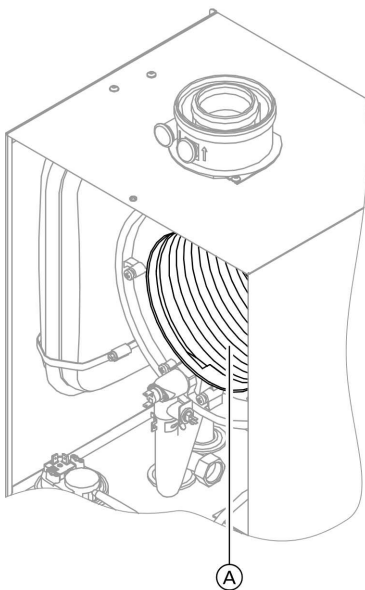

If required, clean heating surfaces (A) with a brush or flush with water.




### Achtung

Scratches on parts which are in contact with flue gases can lead to corrosion.

Only use plastic brushes and NOT wire brushes.

## Routine Servicing Instructions (Fortsetzung)


### Checking the condensate drain and cleaning the siphon

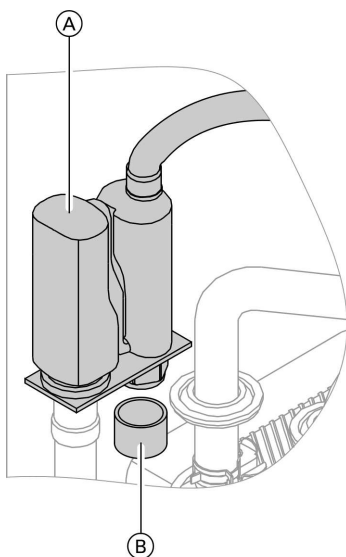

1. Check at the siphon, that the condensate can freely drain.
2. Place an appropriate container under the siphon (A).
3. Remove the locking cap (B) and drain the siphon content.
4. Replace the locking cap (B).
5. Fill the siphon (A) with water by pouring about 0.3l of water into the combustion chamber.

## Routine Servicing Instructions (Fortsetzung)

### Burner installation

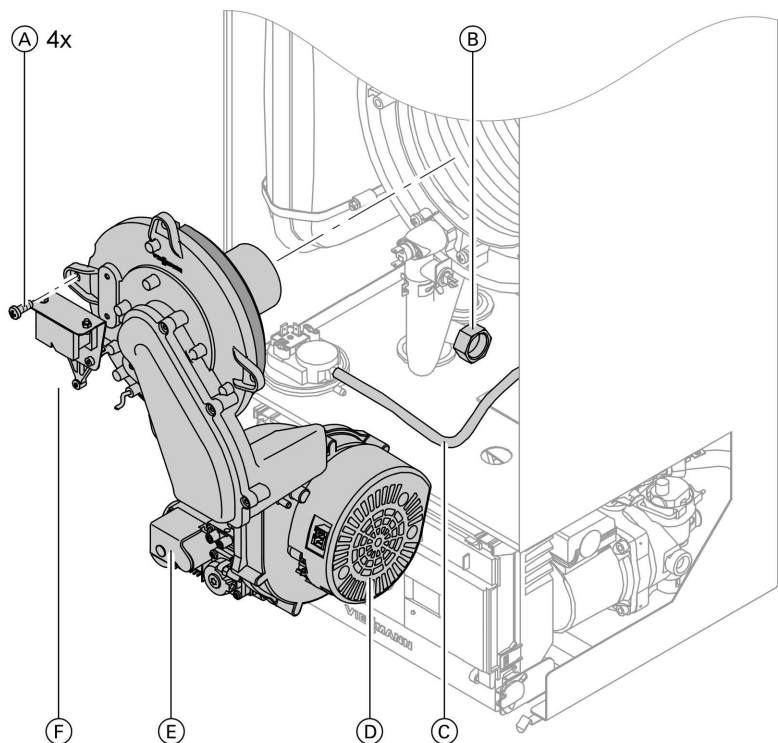

1. Install the burner and torque screws (A) diagonally. (4 Nm. approx.)
2. Insert new gasket and tighten the fittings on the gas connection pipe (B)
3. Insert air pressure switch connection pipe (C) onto the gas valve „OUT“ connector.
4. Replace electrical cables from fan motor (D), gas valve (E), and ignition unit (F).
5. Open gas shut-off valve and switch on the mains.

## Routine Servicing Instructions (Fortsetzung)

6. Check the gas connections for soundness.



### Gefahr

Escaping gas leads to a risk of explosion.  
Check all fittings for soundness.

## Check primary and secondary connections for leaks



### Checking diaphragm expansion vessel and system pressure


#### Hinweis

Carry out this test on a cold system.

1. Empty the system until a pressure of „0“ is displayed.

#### Hinweis



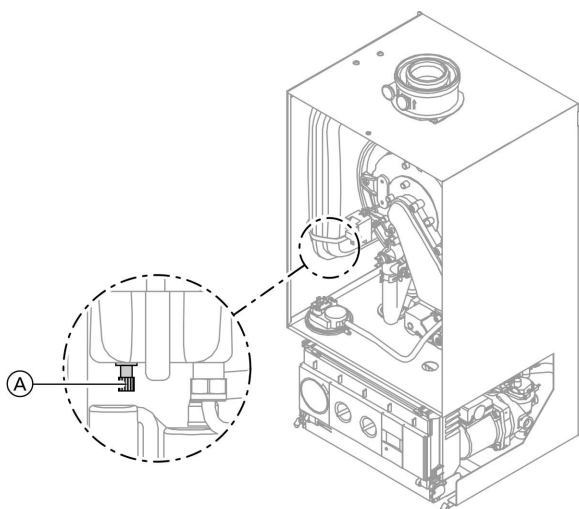

To view the operating pressure, turn rotary selectors „ III“ and „“ counter clockwise to the end stop.



## Routine Servicing Instructions (Fortsetzung)

2. Check the inlet pressure of the diaphragm expansion vessel at the test nipple (A).
3. If the inlet pressure of the diaphragm expansion vessel is lower than the static system pressure, top up with nitrogen until the inlet pressure is raised by 0.1 to 0.2 bar.
4. Top up your heating system with water and vent until the filling pressure of a cool system is 0.2 bar higher than the inlet pressure of the diaphragm expansion vessel.  
Max. operating pressure: 3 bar  
Min. operating pressure: 1.0 bar

## Topping up heating water via an external filling loop

1. Turn both rotary selectors „ III“ and „“ counter clockwise to the end stop.  
The display shows the operating pressure.
2. Top up heating water via the external filling loop, until the required operating pressure has been reached.
3. Return both rotary selectors „ III“ and „“ to their original positions.

## Checking function of all safety valves


## Checking tightness of electrical connections

## Checking static and supply pressure

See page 52.

## Routine Servicing Instructions (Fortsetzung)

### Front panel installation

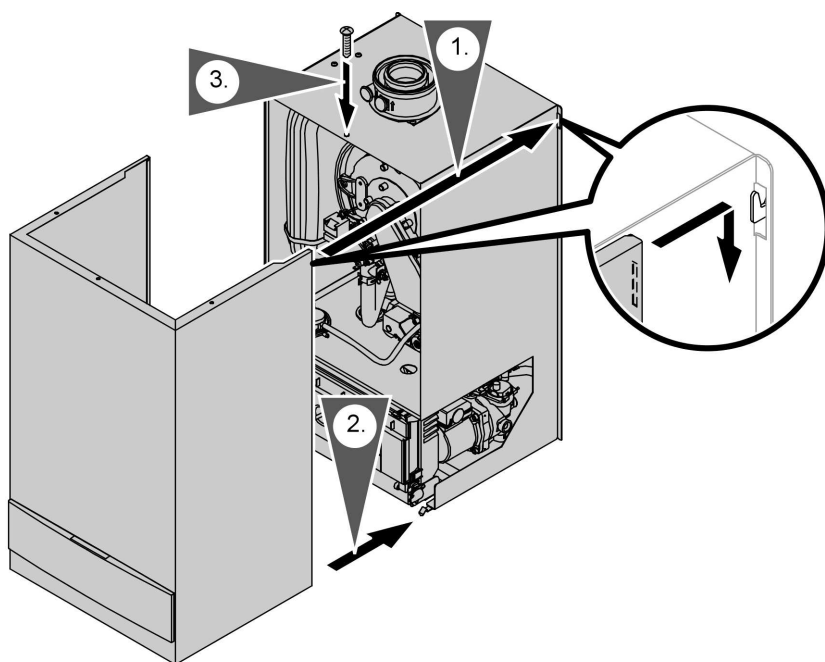

1. Hang the front panel to the wall mounting frame by the appropriate hook.

2. Press down the front panel at the bottom.

3. Insert the screw at the top of the boiler.

#### **Hinweis**

*The outer case forms a seal with the combustion box: It must therefore be securely fitted with the screw provided.*

### Start-up the boiler

1. Open gas shut-off valve and switch on mains voltage.

2. Check the operation of the appliance in both central heating and DHW modes.

## **Routine Servicing Instructions** (Fortsetzung)

### **Checking all gas equipment for soundness at operating pressure**



#### **Gefahr**

Escaping gas leads to a risk of explosion.

Check gas equipment for soundness.

### **Final checks**

1. Check that the flue terminal is in good condition and clear of any obstructions.
2. Return all appliance and external controls (if fitted) to their original settings.

## Fault finding

### General

#### Hinweis


*It is the law that any service work must be carried out by a competent CORGI registered engineer.*


Before looking for a fault condition, check that:


- The mains electrical supply is turned on.
- The clock and / or room thermostat (if fitted) are calling for heat (CH 'faults' only).
- The gas service cock is open.
- The DHW (Combi only) and CH isolation cocks are open.
- The system is at design pressure.

Before attempting any electrical fault finding, always conduct the preliminary electrical system safety checks. On completion of any service or fault finding operation involving making or breaking electrical connections always check for earth continuity, polarity and resistance to earth.

### Function sequence and possible faults

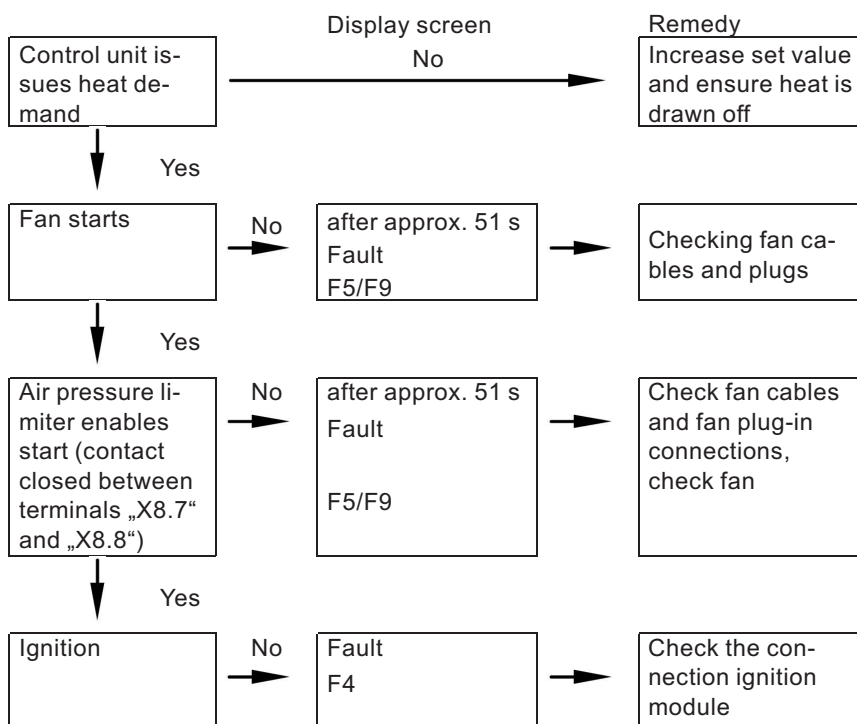

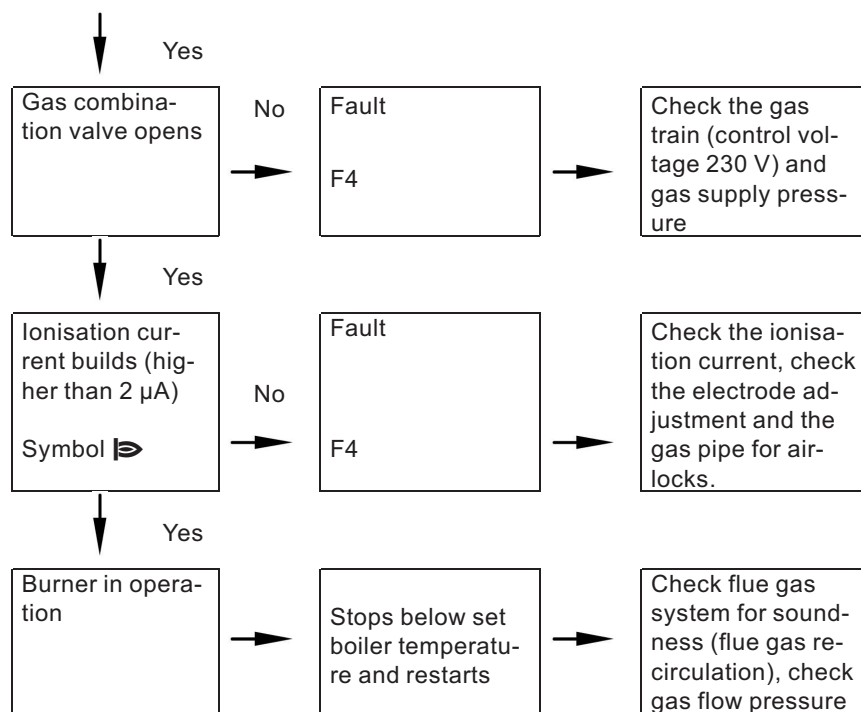**Fault finding** (Fortsetzung)

Faults are indicated by a flashing fault code with fault symbol „For fault code explanations see the following table.

Display fault code	Verhalten der Anlage	Störungsursache	Maßnahme
30	Burner blocked	Boiler temperature sensor shorted out	Check the boiler temperature sensor (see page 72).

**Fault finding** (Fortsetzung)


Display fault code	Verhalten der Anlage	Störungsursache	Maßnahme
38	Burner blocked	Boiler temperature sensor lead break	Check the boiler temperature sensor (see page 72).
51	No DHW heating	Draw off temperature sensor short circuit	Check sensors (see page 74).
59	No DHW heating	Draw off temperature sensor short circuit	Check sensors (see page 74).
b1	Control mode	Communication fault – programming unit (internal)	Check connections and replace the programming unit, if necessary.
b5	Control mode	Internal fault	Replace control unit.
E4	Burner blocked	Fault – supply voltage	Replace control unit.
E5	Burner blocked	Internal fault	Check the ionisation electrode and leads. Press „Reset“.
E6	Burner blocked	Water pressure too low	Top up water (see page 63).
F0	Burner blocked	Internal fault	Replace control unit.
F2	Burner in fault state	Temperature limiter has responded.	Check the heating system water level. Check the circulation pump. Vent the heating system. Check the temperature limiter and leads. Press „Reset“.
F3	Burner in fault state	The flame signal is already present at burner start.	Check the ionisation electrode and leads. Press „Reset“.
F4	Burner in fault state	No flame signal is present.	Check the ionisation electrode and leads, measure the ionisation current, check the gas pressure, check the gas combination valve, ignition, ignition module and condensate drain. Press „Reset“.

**Fault finding** (Fortsetzung)

Display fault code	Verhalten der Anlage	Störungsursache	Maßnahme
F5	Burner blocked	Air pressure switch faulty	Check the air pressure switch and the interconnecting cable.
F7	Burner blocked	Faulty water pressure sensor	Check the water pressure sensor and the interconnecting cable.
F8	Burner in fault state	Fuel valve closes too late	Check gas combination valve. Check both control paths. Press „Reset“.
F9	Burner in fault state	Fan speed too low at burner start	Check the fan, check the fan cables and supply, check the fan control. Press „Reset“.
FA	Burner in fault state	Fan not at standstill	Check the fan, check the fan cables, check the fan control. Press „Reset“.
Fd	Burner blocked	Burner control unit fault	Check the ignition electrodes and leads. Check whether a strong interference (EMC) field exists near the equipment. Press „Reset“. If the fault is not removed, replace the control unit.
FE	Burner blocked	Faulty main PCB	Switch OFF the control unit, if the equipment will not restart.

## Repairs

### Removing front panel

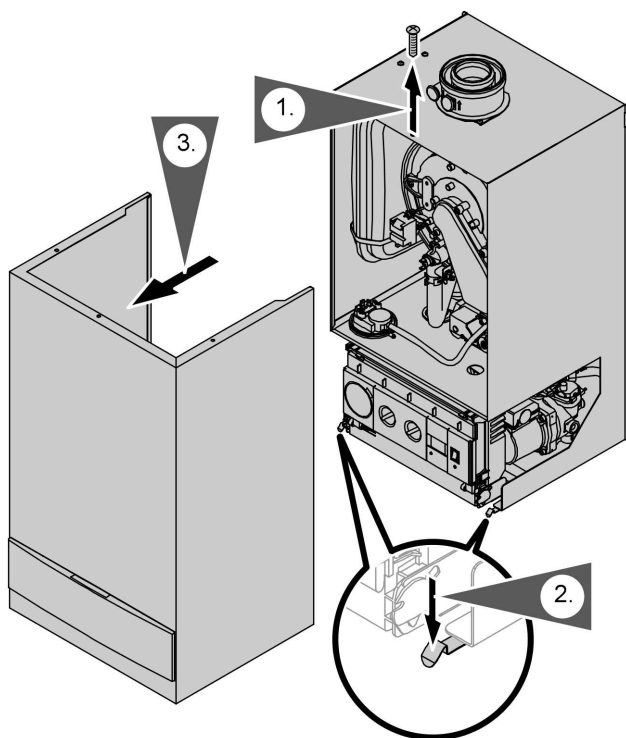


1. Remove the screw at the top of the boiler.
2. Press down the springs on the underside of the boiler and remove the front panel.
3. Lift the front panel from the wall mounting frame.

### Drain boiler on the primary side

#### **Hinweis**

*For certain repairs the boiler must be drained on the primary side.*

## Repairs (Fortsetzung)

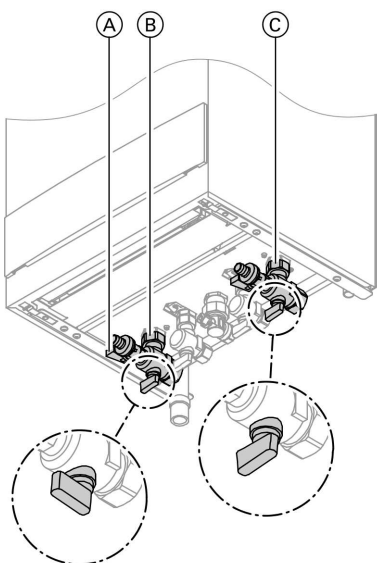

1. Connect the drain hose to valve (A) and connect with a drain outlet.
2. Turn toggle on the shut-off valve (B) to the front.
3. Turn toggle on the shut-off valve (C) to the front.
4. Turn toggle on the valve (A) to the front and drain the boiler if necessary.  
Turn toggle back down again.

### **Hinweis**

*Residual water left in the boiler.*


5. Turn toggle on the shut-off valve (B) to the front.

### **Hinweis**


*Filling up on the primary side see page 48.*

## Repairs (Fortsetzung)

### Boiler temperature sensor

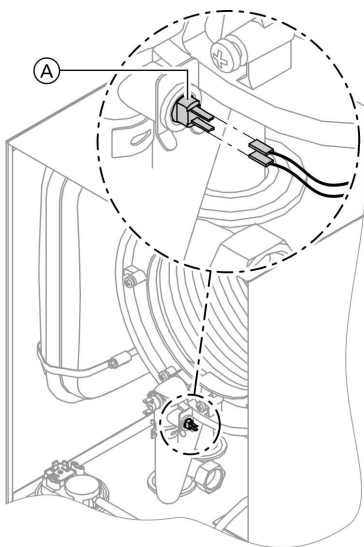

1. Pull the leads from boiler temperature sensor **A** and measure the resistance.

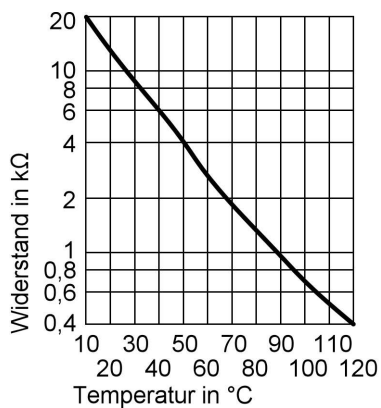

2. Check the sensor resistance and compare actual values with the curve.
3. In case of severe deviation, drain boiler on the primary side (see page 70) and replace the sensor.




#### Gefahr

The boiler temperature sensor is immersed in the heating water (risk of scalding). Drain the boiler before replacing the sensor.

**Repairs** (Fortsetzung)**Check the temperature limiter**


If the burner control unit cannot be reset after a fault shutdown, although the boiler water temperature is below approx. 75 °C, check the temperature limiter.

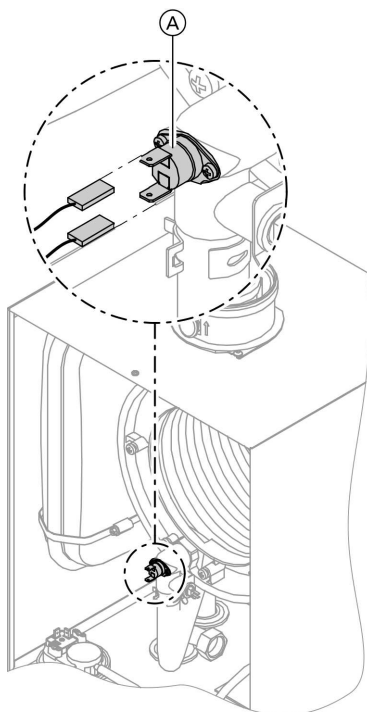


1. Pull the leads from temperature limiter (A).
2. Check the continuity of the temperature limiter with a multimeter.
3. Remove faulty temperature limiter.
4. Coat the replacement temperature limiter with heat conducting paste and install.
5. To reset press „Reset“ key on the control unit.

## Repairs (Fortsetzung)

### Check the DHW temperature sensor (only for gas combination devices)

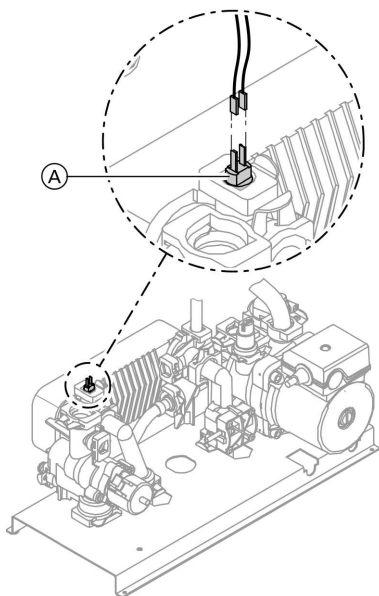

1. Pull the leads from outlet temperature sensor (A)
2. Check the sensor resistance and compare actual values with the curve.

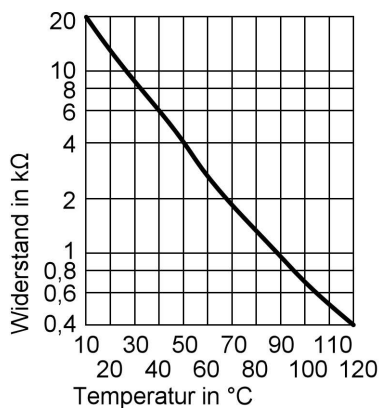


3. Replace the sensor in case of severe deviation.

#### **Hinweis**

Water can leak out when replacing the outlet sensor. Close the cold water shut-off valve. Drain DHW pipe and plate heat exchanger (secondary side).

## Repairs (Fortsetzung)


### Replacing flow limiter

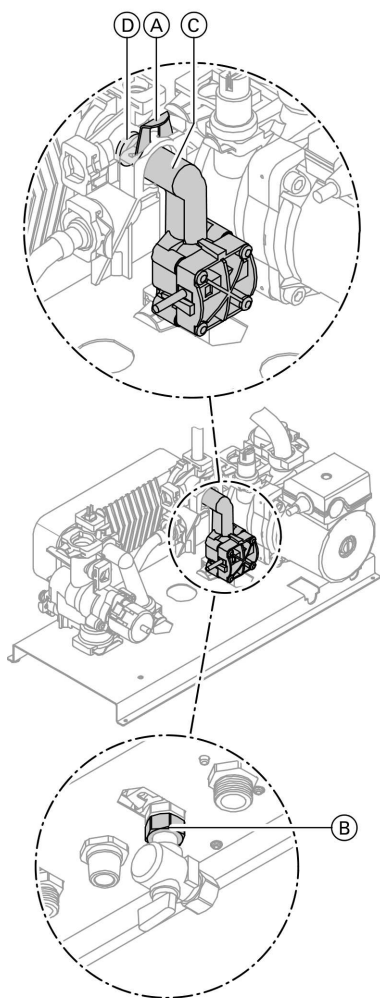

1. Switch OFF the mains power.
2. Close the gas shut-off valve and safeguard against reopening.
3. Drain the boiler from the secondary side.
4. Pivot the control unit downwards.
5. Release the ties (A) and screws (B).
6. Remove the flow switch (C) connector.
7. Replace flow limiter (D).
8. Refit the flow switch (C) connector.

## Repairs (Fortsetzung)

### Checking plate heat exchanger

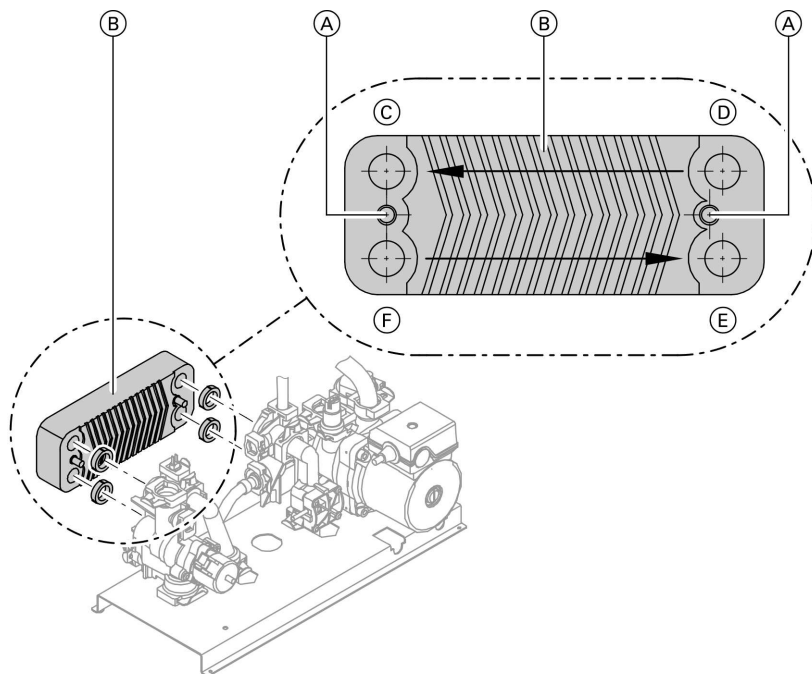

- Ⓒ DHW
- Ⓓ Cold water

- Ⓔ Heating water return
- Ⓕ Heating water flow

1. Switch OFF the mains power.
2. Close the gas shut-off valve and safeguard against reopening.
3. Shut off and drain the boiler on the primary and the secondary side. Draining on the primary side (see page 70).
4. Flip down control unit.

5. Remove two screws Ⓐ at the plate heat exchanger and Ⓑ remove.

#### **Hinweis**

*During removal, small amounts of water may trickle out and escape from the removed plate heat exchanger.*

6. Check the secondary side for contamination and, if necessary, clean or replace the plate heat exchanger.


## Repairs (Fortsetzung)

7. Check the primary side for contamination and, if necessary, clean or replace the plate heat exchanger.
8. Install in reverse order using new gaskets.

### Hinweis


Ensure that fixing holes and seals are aligned. Install the heat plate exchanger the correct way round.

## Checking the fuse

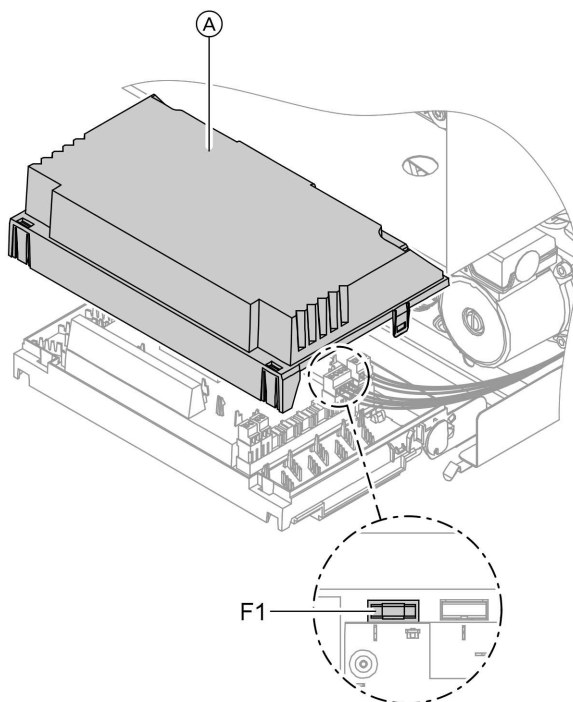

1. Switch OFF the mains power.
2. Flip down control unit.
3. Remove cover (A).
4. Check fuse F1.

# Connection and wiring diagrams – combi boiler

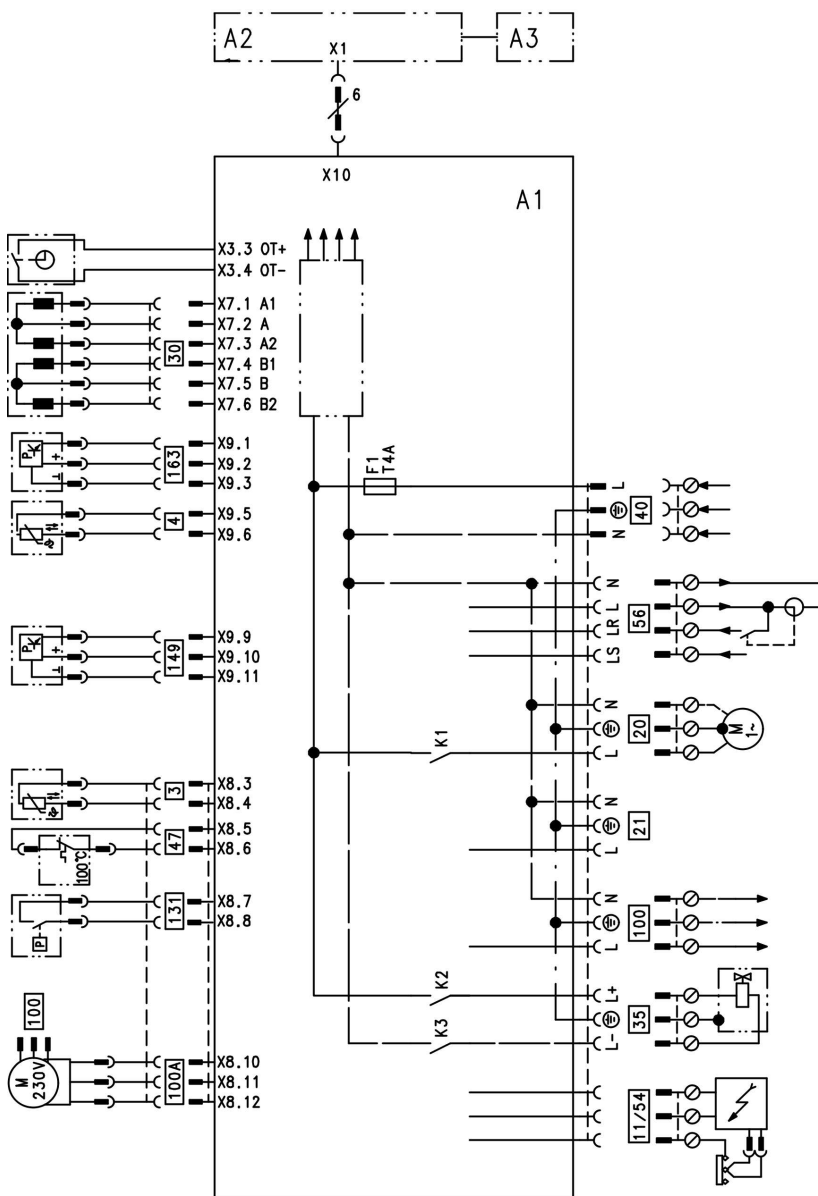


A1 Main PCB

A2 Programming unit

## Connection and wiring diagrams – combi boiler (Fortsetzung)

A3	Time switch	47	Temperature limiter
3	Boiler temperature sensor	56	Mains connection accessories/ room temperature control
4	DHW outlet sensor	100	A Fan
20	Circulation pump 230V~	131	Air pressure switch
30	Step motor diverter valve	149	Flow switch
35	Gas solenoid valve	163	Water pressure sensor
40	Mains input 230V~/50Hz		

## Connection and wiring diagram - system boiler

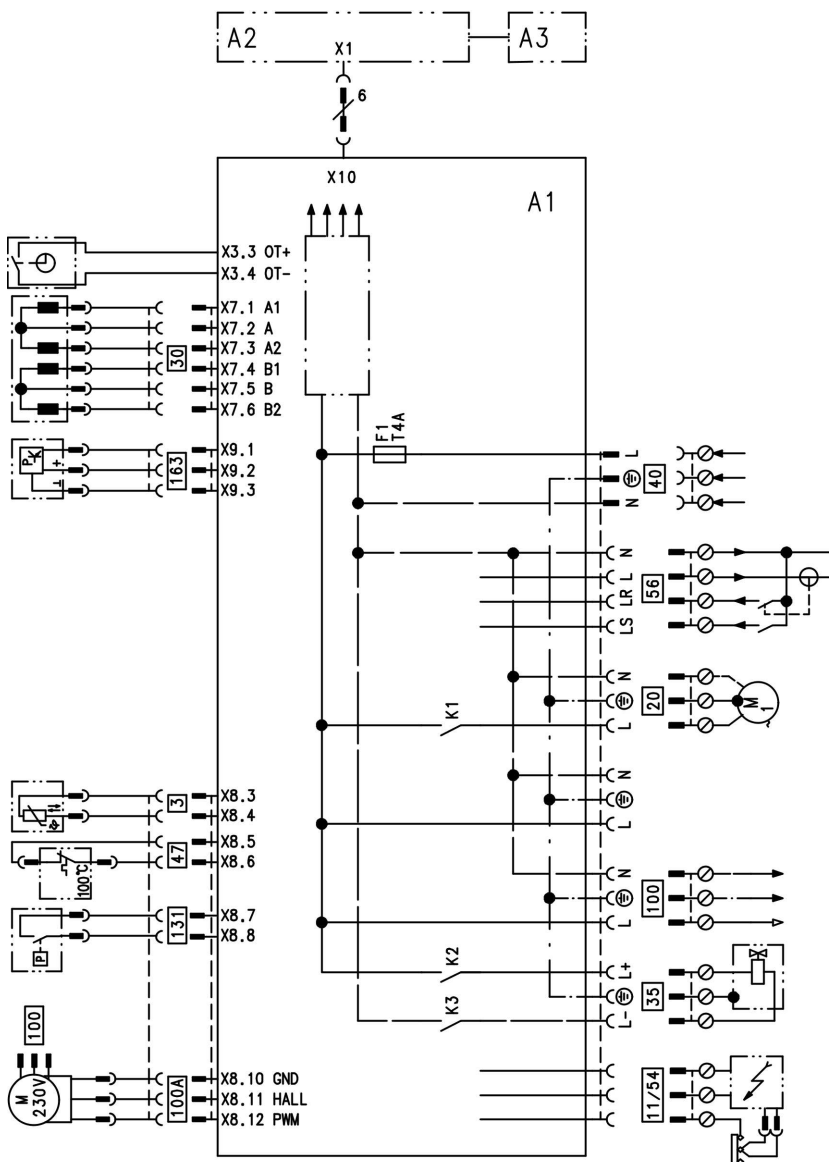

A1 Main PCB  
A2 Programming unit

A3 Time switch  
[3] Boiler temperature sensor

**Connection and wiring diagram - system boiler (Fortsetzung)**

20	Circulation pump 230V~	56	Mains connection accessories/ room temperature control/DHW cylinder control
30	Step motor diverter valve	100	A Fan
35	Gas solenoid valve	131	Air pressure switch
40	Mains input 230V~/50Hz	163	Water pressure sensor
47	Temperature limiter		

## Einzelteillisten

### **Spare parts information**

*Quote the type and serial no. (see data plate) and the item no. of the required part (as per this parts list). Obtain standard parts from your local supplier.*

- 001 Thermocouple
- 002 Temperature sensor
- 003 Pressure switch
- 004 Control cable
- 005 Diaphragm expansion vessel connecting cable
- 006 Diaphragm expansion vessel
- 007 Boiler connection plug
- 008 Boiler adaptor
- 009 Flue gas gaskets (set)
- 010 Heat exchanger
- 011 Insulating block
- 012 Heat exchanger mounting (set)
- 013 Condensate hose
- 014 Siphon
- 015 Condensate pipe
- 016 Gas supply pipe
- 017 Heating water flow connection elbow
- 018 Heating water return connection elbow
- 019 Heating water flow connection pipe
- 020 Heating water return connection pipe
- 021 Plate heat exchanger\*<sup>1</sup>
- 022 Gasket set – plate heat exchanger\*<sup>1</sup>
- 026 Quick air vent valve cartridge
- 027 Safety valve
- 028 Water pressure sensor
- 029 Flow switch\*<sup>1</sup>
- 030 Step motor cartridge
- 031 Circulation pump

- 032 Bypass with overflow valve
- 033 Grommets
- 034 Gaskets (set)
- 035 Spring clips (set)
- 036 Flow limiter
- 037 Hydraulic
- 040 Lip seal Ø 60 mm
- 041 Ventilation seal Ø 100 mm
- 050 Burner gasket
- 051 Insulation ring
- 052 Burner gauze assembly
- 053 Burner gauze assembly gasket
- 058 Mixture damper
- 059 Radial fan
- 060 Venturi top
- 061 Gas train
- 062 Burner door
- 063 Ignition unit
- 080 Control unit
- 081 Cover – wiring chamber
- 200 Front panel
- 201 Spring tie
- 202 Cover flap
- 203 Domestic water fittings (set)\*<sup>1</sup>
- 204 Heating water fittings (set)
- 205 Corner gas tap
- 206 Elbow with locking ring fittings Ø 22 mm (set)\*<sup>2</sup>

### **Wearing parts**

- 054 Ignition and ionisation electrode

### **Parts not shown**

- 039 Installation and service instructions
- 090 Cable harness X8
- 091 Cable harness X9
- 092 Cable harness 100/35/54
- 093 Step motor connecting cable
- 094 Mains power switch cable harness

\*<sup>1</sup>Only for serial no. 7179917 and 7179917

\*<sup>2</sup>Only for serial no. 7179918




## Einzelteillisten (Fortsetzung)


095 Gas valve connecting cable 35  
 096 Ignition transformer/ionisation  
 connecting cable

300 Touch-up spray paint, Vitowhite  
 301 Touch-up paint stick, Vitowhite  
 (A) Data plate

# Einzelteillisten (Fortsetzung)

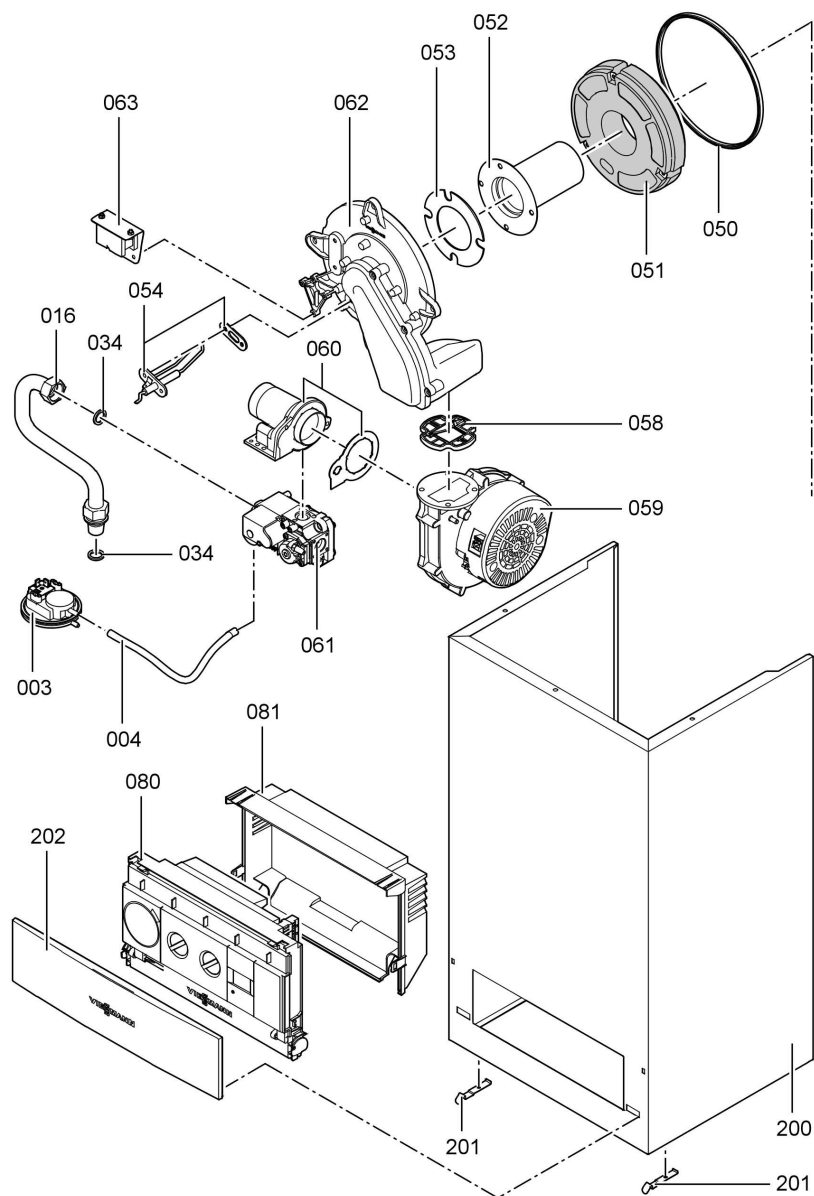


Einzelteillisten (Fortsetzung)

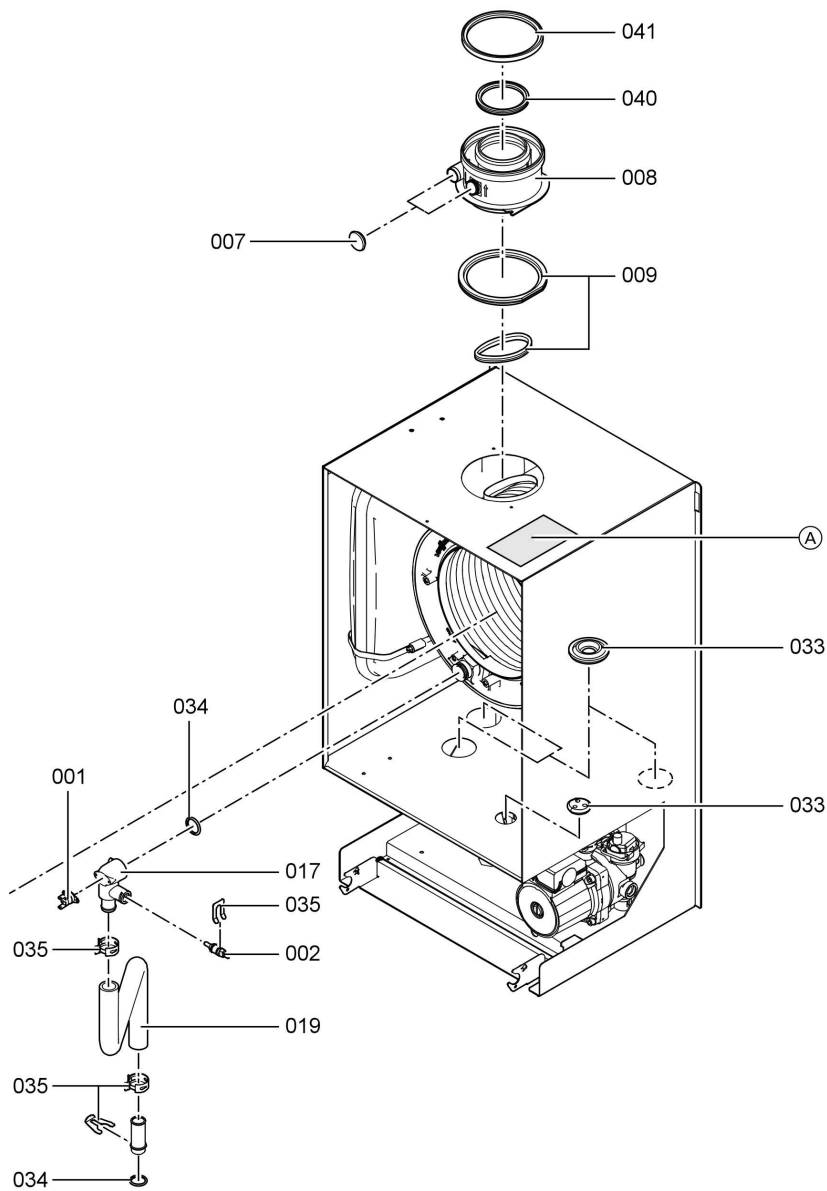


5851 670

Service

# Einzelteillisten (Fortsetzung)

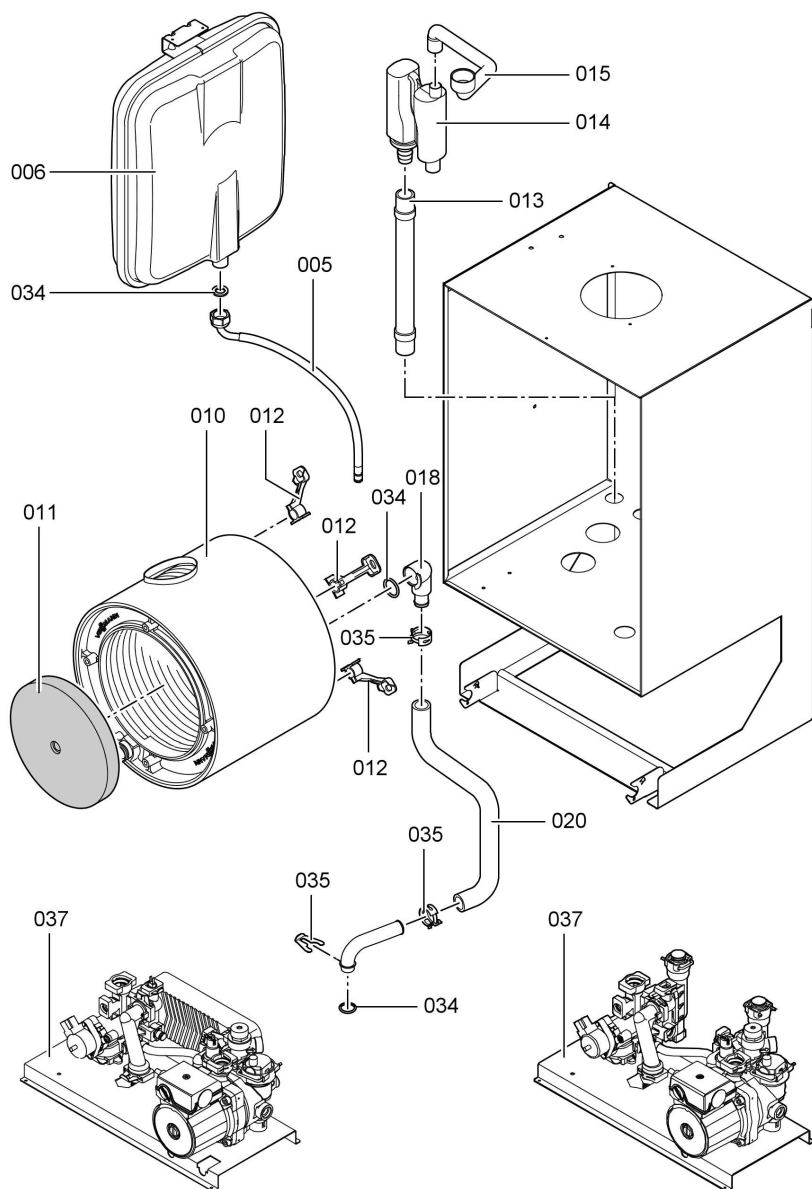

Einzelteillisten (Fortsetzung)

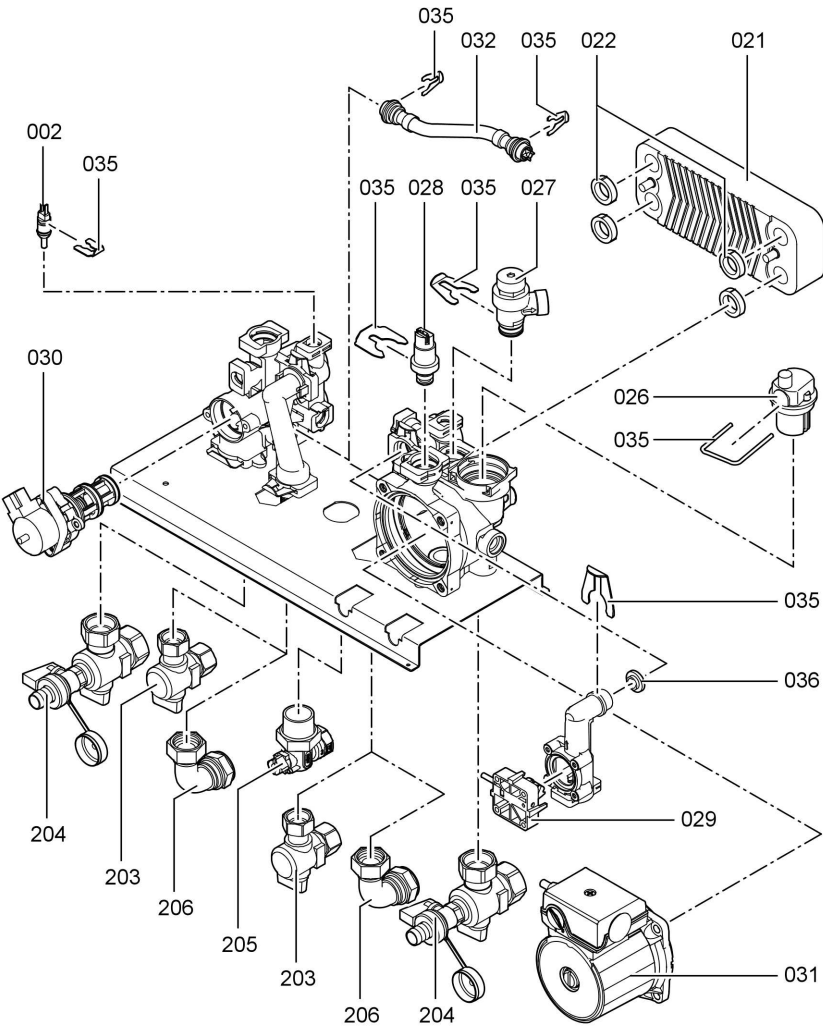

Service

## Protokolle



BENCHMARK No. | | | | | | | | | |

# GAS BOILER COMMISSIONING CHECKLIST

BOILER SERIAL No. \_\_\_\_\_ NOTIFICATION No. \_\_\_\_\_

**CONTROLS** To comply with the Building Regulations, each section must have a tick in one or other of the boxes

TIME & TEMPERATURE CONTROL TO HEATING	ROOM T/STAT & PROGRAMMER/TIMER	<input type="checkbox"/>	PROGRAMMABLE ROOM/STAT	<input type="checkbox"/>
TIME & TEMPERATURE CONTROL TO HOT WATER	CYLINDER T/STAT & PROGRAMMER/TIMER	<input type="checkbox"/>	COMBI BOILER	<input type="checkbox"/>
HEATING ZONE VALVES	FITTED	<input type="checkbox"/>	NOT REQUIRED	<input type="checkbox"/>
HOT WATER ZONE VALVES	FITTED	<input type="checkbox"/>	NOT REQUIRED	<input type="checkbox"/>
THERMOSTATIC RADIATOR VALVES	FITTED	<input type="checkbox"/>		
AUTOMATIC BYPASS TO SYSTEM	FITTED	<input type="checkbox"/>	NOT REQUIRED	<input type="checkbox"/>

## FOR ALL BOILERS CONFIRM THE FOLLOWING

THE SYSTEM HAS BEEN FLUSHED IN ACCORDANCE WITH THE BOILER MANUFACTURER'S INSTRUCTIONS? ☐

THE SYSTEM CLEANER USED \_\_\_\_\_

THE INHIBITOR USED \_\_\_\_\_

## FOR THE CENTRAL HEATING MODE, MEASURE & RECORD

GAS RATE \_\_\_\_\_ m<sup>3</sup>/hr \_\_\_\_\_ ft<sup>3</sup>/hr

BURNER OPERATING PRESSURE (IF APPLICABLE) ☐ N/A \_\_\_\_\_ mbar

CENTRAL HEATING FLOW TEMPERATURE \_\_\_\_\_ °C

CENTRAL HEATING RETURN TEMPERATURE \_\_\_\_\_ °C

## Protokolle (Fortsetzung)

### FOR COMBINATION BOILERS ONLY

HAS A WATER SCALE REDUCER BEEN FITTED? ☐ YES ☐ NO ☐

WHAT TYPE OF SCALE REDUCER HAS BEEN FITTED? \_\_\_\_\_

### FOR THE DOMESTIC HOT WATER MODE, MEASURE & RECORD

GAS RATE \_\_\_\_\_ ☐ m<sup>3</sup>/hr \_\_\_\_\_ ft<sup>3</sup>/hr \_\_\_\_\_

MAXIMUM BURNER OPERATING PRESSURE (IF APPLICABLE) \_\_\_\_\_ ☐ N/A \_\_\_\_\_ mbar \_\_\_\_\_

COLD WATER INLET TEMPERATURE \_\_\_\_\_ °C \_\_\_\_\_

HOT WATER OUTLET TEMPERATURE \_\_\_\_\_ °C \_\_\_\_\_

WATER FLOW RATE \_\_\_\_\_ lts/min \_\_\_\_\_

### FOR CONDENSING BOILERS ONLY CONFIRM THE FOLLOWING

THE CONDENSATE DRAIN HAS BEEN INSTALLED IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS? ☐ YES ☐

### FOR ALL INSTALLATIONS CONFIRM THE FOLLOWING

THE HEATING AND HOT WATER SYSTEM COMPLIES WITH CURRENT BUILDING REGULATIONS ☐

THE APPLIANCE AND ASSOCIATED EQUIPMENT HAS BEEN INSTALLED AND COMMISSIONED IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS ☐

IF REQUIRED BY THE MANUFACTURER, HAVE YOU RECORDED A CO/CO<sub>2</sub> RATIO READING? ☐ N/A ☐ YES ☐ CO/CO<sub>2</sub> RATIO \_\_\_\_\_

THE OPERATION OF THE APPLIANCE AND SYSTEM CONTROLS HAVE BEEN DEMONSTRATED TO THE CUSTOMER ☐

THE MANUFACTURER'S LITERATURE HAS BEEN LEFT WITH THE CUSTOMER ☐

COMMISSIONING ENG'S NAME PRINT \_\_\_\_\_ CORGI ID No. \_\_\_\_\_

SIGN \_\_\_\_\_ DATE \_\_\_\_\_

Service

Protokolle (Fortsetzung)

SERVICE INTERVAL RECORD

It is recommended that your heating system is serviced regularly and that you complete the appropriate Service Interval Record Below.

**Service Provider.** Before completing the appropriate Service Interval Record below, please ensure you have carried out the service as described in the boiler manufacturer's instructions. Always use the manufacturer's specified spare part when replacing all controls

SERVICE 1

DATE

ENGINEER NAME

COMPANY NAME

TEL No.

CORG I D CARD SERIAL No.

COMMENTS

SIGNATURE

SERVICE 2

DATE

ENGINEER NAME

COMPANY NAME

TEL No.

CORG I D CARD SERIAL No.

COMMENTS

SIGNATURE

SERVICE 3

DATE

ENGINEER NAME

COMPANY NAME

TEL No.

CORG I D CARD SERIAL No.

COMMENTS

SIGNATURE

SERVICE 4

DATE

ENGINEER NAME

COMPANY NAME

TEL No.

CORG I D CARD SERIAL No.

COMMENTS

SIGNATURE

Protokolle (Fortsetzung)

**SERVICE 5** DATE  
ENGINEER NAME  
COMPANY NAME  
TEL No.  
CORGi ID CARD SERIAL No.  
COMMENTS  
SIGNATURE

**SERVICE 6** DATE  
ENGINEER NAME  
COMPANY NAME  
TEL No.  
CORGi ID CARD SERIAL No.  
COMMENTS  
SIGNATURE

**SERVICE 7** DATE  
ENGINEER NAME  
COMPANY NAME  
TEL No.  
CORGi ID CARD SERIAL No.  
COMMENTS  
SIGNATURE

**SERVICE 8** DATE  
ENGINEER NAME  
COMPANY NAME  
TEL No.  
CORGi ID CARD SERIAL No.  
COMMENTS  
SIGNATURE

**SERVICE 9** DATE  
ENGINEER NAME  
COMPANY NAME  
TEL No.  
CORGi ID CARD SERIAL No.  
COMMENTS  
SIGNATURE

**SERVICE 10** DATE  
ENGINEER NAME  
COMPANY NAME  
TEL No.  
CORGi ID CARD SERIAL No.  
COMMENTS  
SIGNATURE

## Konformitätserklärung

### Declaration of conformity for Vitodens 100

We, Viessmann Werke GmbH & Co KG, D-35107 Allendorf, declare as sole responsible body, that the product

#### **Vitodens 100**

#### **conforms to the following standards:**

DIN 4702-6

EN 297

EN 483

EN 625

EN 677

EN 50,165

EN 60,335

EN 61 000-3-2

EN 61 000-3-3

#### **This product is designated in accordance with the following directives:**

90/ 396/EEC

89/ 336/EEC

73/ 23/EEC

92/ 42/EEC

#### **as follows:**

**CE-0085**

EC Declaration of conformity by an authorised body according to EMVG article 10.2 Certificate number: E9 02 08 1730.

This product complies with the requirements of the Efficiency Directive (92/42/EEC) for:

#### **Condensing boilers**

Allendorf, 08.05.06

Viessmann Werke GmbH&Co KG



pp. Manfred Sommer


## Stichwortverzeichnis

<b>A</b>		<b>H</b>	
additives .....	47	Horizontal Flue System .....	9
Appliance description .....	5	<b>I</b>	
Appliance Dimensions .....	7	Ignition electrode .....	58
		Installing fittings .....	33
<b>B</b>		<b>M</b>	
Boiler Position .....	16	Mains connection .....	42
Boiler temperature sensor .....	72	Mounting boiler .....	32
Boiler temperature sensor .....	72		
Burner removal .....	56	<b>O</b>	
		Outlet temperature sensor .....	74
<b>C</b>		<b>P</b>	
Certification details .....	5	Plate heat exchanger .....	76
Cleaning the heating surfaces .....	59	<b>R</b>	
Condensate connection .....	36	Removing front panel .....	32
Connect room temperature control .....	42	<b>S</b>	
Connect safety temperature control .....	42	Safety chain .....	73
Connection diagrams .....	78	Safety Valve .....	35
		Siphon cleaning .....	60
<b>D</b>		Static pressure .....	52
Declaration of conformity .....	92	System pressure .....	49
<b>E</b>		<b>T</b>	
Electrical connections .....	41	Technical Specification .....	6
Electricity Supply .....	28	Temperature limiter .....	73
		Topping up heating water .....	63
<b>F</b>		<b>U</b>	
Fault codes .....	67	User's instructions .....	54
Fault finding .....	66	<b>V</b>	
Fault messages .....	67	Venting .....	50
Fill the system .....	49	Vertical Flue System .....	10
Final checks .....	54	<b>W</b>	
Flow limiter .....	75	Wall mounting bracket installation .....	29
Flue outlet .....	39		
Function sequence .....	66		
Fuse .....	77		
<b>G</b>			
Gas combination valve .....	52		
Gas connection .....	33		
Gas Supply .....	27		
Gas supply pressure .....	52		
General Information .....	5		

## Stichwortverzeichnis



## Stichwortverzeichnis



## Gültigkeitshinweis

### **Gas fired condensing combi boiler**

#### **Type WB1A**

#### **8 to 24 kW**

from serial no.

7179 917 5 00001

#### **8 to 30 kW**

from serial no.

7179 916 5 00001

### **Gas fired condensing boiler**

#### **Type WB1A**

#### **8 to 24 kW**

from serial no.

7179 918 5 00001

Viessmann Werke GmbH&Co KG  
D-35107 Allendorf  
Telefon:06452 70-0  
Telefax:06452 70-2780  
[www.viessmann.de](http://www.viessmann.de)

5851 670 Technische Änderungen vorbehalten!